



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org



PATENTS APPLIED FOR
DESIGN REGISTERED
THREEPENCE.

Guarantee.

THIS Camera has been carefully tested and is guaranteed to be in perfect working order when it leaves our factory. In case of complaints, the Camera should be returned to us by post accompanied by this Guarantee Form which must be completed. Stamps value 1/- must be attached to cover cost of return postage and packing.

It is distinctly understood that this guarantee does not cover defects arising from :—

1. **Normal and reasonable use.**
2. **Alteration in any way, so as in our opinion to affect its reliability or performance.**
3. **Damage of whatsoever nature and however arising.**

My name and Address is.....

I purchased the Camera from :—

Name and Address of Dealer :

Approximate date
of purchase :

.....193..

Coronet Camera Co.,
Birmingham, 19.



INSTRUCTIONS FOR USE OF CORONET MIDGET CAMERA.

The Coronet Midget Camera opens a new era in photography for the amateur. The Camera is so small that it can be carried with ease in a lady's handbag, or in a gentleman's waistcoat pocket. Yet notwithstanding its smallness, it produces perfect pictures which can be enlarged to many times their original size.

It is a real Camera for the serious amateur, and not a toy.

Any chemist or photographic dealer will be only too pleased to explain anything you want to know about your Coronet Midget. So do not hesitate to ask if you are in doubt on any point.

HOW TO LOAD YOUR CORONET MIDGET.

All Coronet Cameras can be loaded in daylight. But do not load in direct bright sunlight — always get into the shade.

Open the back door of the Camera, insert spool of film in the bottom chamber with the end of the paper pointing towards the top chamber.

Gently break and remove the gummed band which fastens your new spool of film.

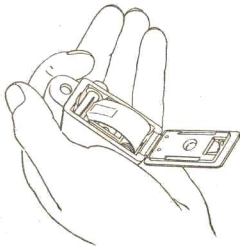


Fig. 1.

Lead the paper carefully across the opening and thread it through the longest slot in the empty spool (see Fig. 1). Give the spool two or three turns to make quite sure that the paper is held securely. TAKE CARE THAT THE PAPER FITS SQUARELY INTO THE SLOT, otherwise the film will not wind properly.

If, when fitting the paper into the empty spool, you take the empty spool from the Camera, MAKE CERTAIN THAT WHEN YOU REPLACE IT THE SLOTTED END OF THE SPOOL IS NEAREST THE WINDING KEY.

Close the Camera.

Move the safety slide into position so that it prevents the shutter from being accidentally pressed, and turn the winding key very slowly, at the same time watching the little red window at the back of the Camera. Soon you will see a hand or some other mark appear which indicates that No. 1 section of the film is approaching the position for exposure. GO VERY SLOWLY, AND STOP WINDING THE INSTANT FIG. 1 APPEARS IN THE RED WINDOW. You are now ready to take photographs.

TAKING PHOTOGRAPHS WITH THE CORONET MIDGET CAMERA.

The lens fitted to this Camera has been specially designed, calculated and produced by Messrs. Taylor, Taylor & Hobson, the world-famous firm of high-class photographic lens manufacturers. Every one has been definitely and accurately tested and is capable of producing magnificently sharp pictures, which will enlarge into many times the original size.

The lens is of the fixed focus type, so that no adjustment is necessary. It is only necessary for the user to sight the object to be photographed carefully through the direct brilliant viewfinder, and then to press the shutter lever.

The depth of the focus of this lens is such that it renders all objects in sharp focus from 5-ft. to infinity.

It will be obvious, of course, that only snapshots can be taken with this Camera.

The aperture of the lens is F.10., and the speed of the instantaneous shutter is 1/30 secs.

For an upright picture hold the Camera upright, as illustrated, and

for a lengthwise hold the Camera as illustrated in Fig. 2.

The Camera must be held steady, and the shutter lever pressed very gently.

The shutter fitted is an improved Coronet one-way mechanism, and the snapshot exposure is made on the downward pressure of the lever. When released, the lever returns to its original position, and the shutter resets itself in readiness for the next exposure.



Upright. Fig. 2. Horizontal.

Having taken your photograph, turn the winding key until Fig. 2 appears in the red window. Dots like this appear before each number, to warn you that the number is about to appear. **SO WIND SLOWLY WHEN YOU SEE THEM.**

Owing to the smallness of this Camera, there is not a great deal of space between the position of the winding key and the shutter lever, consequently the following "wrinkle" will be helpful to all users of this wonderful little Camera.

Before turning the winding key, move the safety slide in position. This prevents anyone from accidentally touching the shutter lever and making an exposure while turning the winding key. It will also be found to be a very good tip to hold the winding key still and turn the Camera, instead of holding the Camera and turning the winding key. This is put forward just as a suggestion by the author of these instructions, who much prefers to do this, rather than turn the winding key in the usual manner.

UNLOADING YOUR CORONET MIDGET.

All Coronet Cameras can be unloaded in daylight. But to avoid any possibility of fogging the edges of the film, you must avoid direct light and do the unloading either indoors or in an out-of-the-way corner, or in the shade.

After your last picture has been taken, continue to turn the winding key till the end of the paper has passed the little red window.

Open the Camera as already explained.

Remove the exposed spool of film, taking care that the paper does not loosen on the spool while you are doing this.

A gummed strip will be found attached to the end of the red paper. Moisten it, then stick the red paper down with it. It is best to fold under a small section of the red paper before moistening the strip.

The film is now ready for developing, either by your local photographic dealer or by yourself.

Transfer the empty spool to the top spool holder, taking great care to see that the slotted end of the spool is nearest the winding key.

Reload the Camera with a fresh spool of film, as already described to you.

IF REQUIRED, YOUR PHOTOGRAPHIC DEALER WILL SUPPLY YOU WITH LARGE SIZE $3\frac{1}{4} \times 2\frac{1}{4}$ PRINTS, INSTEAD OF THE MIDGET-SIZED PRINTS, FROM YOUR FILM.

Or, you can have the Midget-sized prints, and carry them about with you in the Coronet Scoper (described and illustrated on page 12), and, by inserting them in this and examining them through the special lens, you will get both enlarged and plastic pictures.

PITFALLS TO AVOID.

Don't attempt indoor snapshots with this Midget Camera.

Don't leave the Camera lying about in the glaring sun for any length of time.

Don't let dust or seaside sand get into the workings of the Camera, or you will have the shutter stick.

Don't oil the shutter.

Hold the Camera securely when taking pictures. There is a great tendency with tiny Cameras to move the Camera slightly at the same time as you press the shutter to take a picture.

Keep your Midget in a CORONET CASE

it will protect it from dust
and damp.

Hand
Stitched
Silk Lined.
Made from
the Finest
Leatherette

Beautiful
Finish



Can be
supplied
in the
following
Colours


WALNUT, GREEN, BLACK or RED

Price $1/9$ each.

Obtainable from all Photographic Dealers
or if direct 3d extra for postage.

SCOPERISE

Your Tiny Prints.

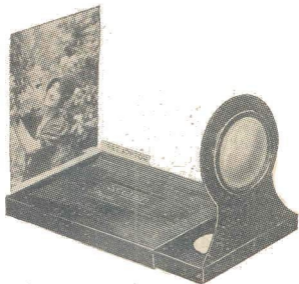

The Coronet SCOPER discovers details hidden from the naked eye on your Midget prints' and gives them astounding perspective, making them almost plastic. Examine all your Midget-prints in the Coronet SCOPER and you will get a new thrill:

Price 1/6

Of all Photographic Dealers or if direct,
3d. extra for postage.