


PETRI ***FLEX*** **7** SEVEN

INSTRUCTION BOOK

Outstanding Features of "PETRI FLEX 7"

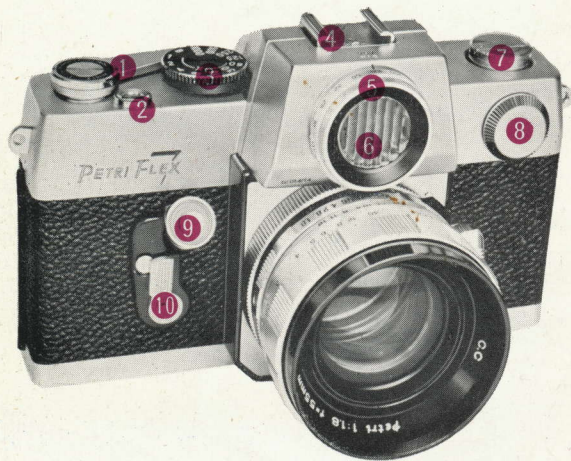

- ① Film Advance Lever
- ② Film Exposure Counter
- ③ Shutter Speed Dial
- ④ Accessory Shoe
- ⑤ ASA Indication Ring
- ⑥ Photo-cell
- ⑦ Film Rewinding Crank
- ⑧ CdS Electric Exposure Meter
- ⑨ Shutter Release Button
- ⑩ Selftimer Lever

Built-in Fully-coupled CdS Meter


Just center the needle in the viewfinder to the indication, and you can get proper exposure EVERY TIME. This is because that your Petri Flex 7 camera is equipped with CdS Meter which fully coupled with Film Sensitiveness, Aperture and Shutter Speed simultaneously. This CdS Meter has vast coupled range(L.V. 4 ~ L.V.18 with ASA 100 film) and the measurement angle of meter is almost same as the one of standard lens, you can obtain the proper exposure from the very position of photographing the subject. Thus, the CdS Meter has versatile features which other types of meters have not.

Fully-Automatic Diaphragm System

As you release the shutter button, the camera DOES the following actions Automatically and Instantly:

1. Sets the proper aperture value.
2. Pushes the mirror upwardly.
3. Advances shutter-screen to expose film.
4. Returns the mirror to original position.
5. Gives the lens back to fully-opened position.



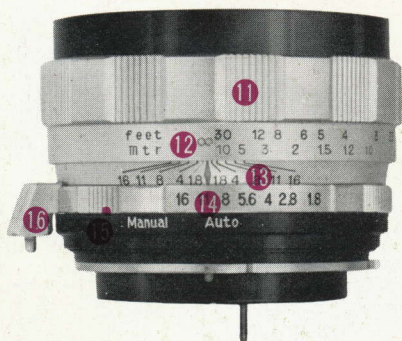

- | | |
|------------------------|----------------------------|
| ① Focusing Ring | ⑭ Aperture Scale |
| ⑫ Distance Scale | ⑮ Auto-Manual Switch Ring |
| ⑬ Depth of Field Scale | ⑯ Aperture Adjusting Lever |

Super-Fast PETRI F 1.8 55mm Lens


The exceedingly fast F1.8 PETRI Lens of your Petri Flex 7 camera is made of highly-refractive Flint-glass and brings you the highest level of optical quality. Lens aberrations have been carefully corrected to insure reproduction of images, "just as see them" and a special lens amber-coating process assures you true color in all your color photography.

Quality-engineered Shutter for High-speed Photography

Focal-plane shutter of Petri Flex 7 can be adjusted in the range of shutter speeds: B, 1, $\frac{1}{2}$, $\frac{1}{4}$, $\frac{1}{8}$, $\frac{1}{15}$, $\frac{1}{30}$, $\frac{1}{60}$, $\frac{1}{125}$, $\frac{1}{250}$, $\frac{1}{500}$, $\frac{1}{1000}$ sec. and you can photograph the subject in high-speed. Shutter Dial is the type of one-pivot non-rotation and selftimer is also built-in.

Automatic Resetting Film-Counter

You do not have to worry about setting the film counter even when loading film as it automatically returns to its original position.



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.


It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

Donate: www.PayPal.me/butkus

venmo: @mike-butkus-camera Ph. 2083



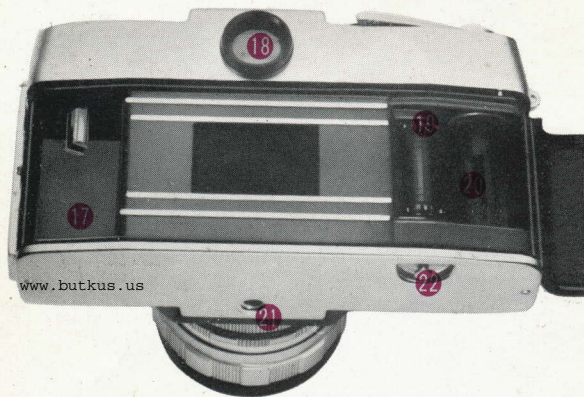

17 Cartridge Compartment

18 Eye-piece

19 Sprocket

20 Take-up Spool

21 Tripod Hole

22 Return Button

Micro-Image Focusing System

In addition to Easy and Bright Viewing of Pentaprism Viewfinder, you can focus instantly when looking through micro-image which magnifies the image in focus. One of the advantages of micro-image focusing is that you can focus quickly even in the dark place.

One-stroke Film-Advance Lever


With single stroke of film advance lever (180°), you can advance one frame of film and can set the shutter simultaneously. Only when you advance the lever, the CdS Meter is set ON.

Other Features :

- Versatile Interchangeable Lenses.
(Bayonet-mount)
- FP and X Synchronization Switch.
- Auto-Manual Switch.
- Crank-type Film Rewinding.
- Built in Selftimer.
- 30° declined shutter release button.
- Accessory Shoe.
- Large Shutter Speed Dial.




FILM LOADING

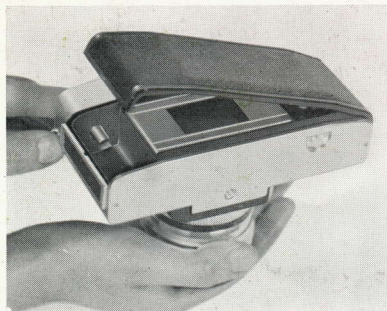


Opening the back cover

Pull down the lever with your thumb-nail, and the cover will be opened automatically.

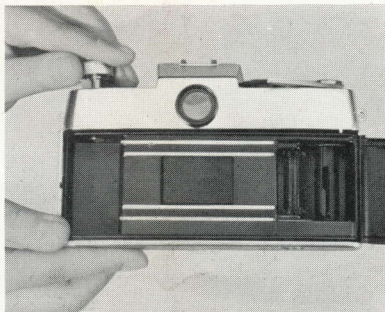

Pull out the rewind crank

Pull it out to the end by picking up the knob to give enough room for film to be inserted into the compartment.

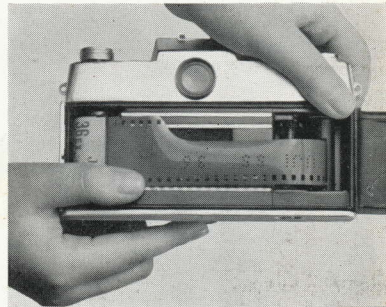


Film loading (1)

Put the end of film into the slot of take-up spool. Place the perforation of film on the projection part in the slot. Put crank back to the original position.

Notice in your Film Loading


- Use 35mm standard film for your Petri Flex 7 .
- Try to avoid the direct sun-light and select the shadowy place.
- You can adjust the position of slot by turning the spool with your finger.

- For your Automatic operation, set the marking, AUTO, of Auto-Manual Ring to the indication. And for Manual Operation, set the Manual-marking to the indication.

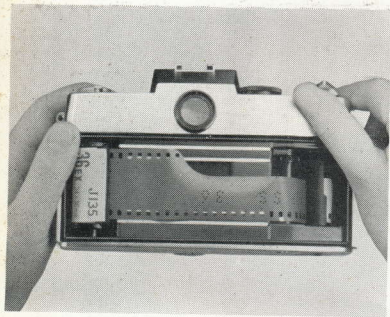

Film loading (2)

Wind the film on the spool by advancing the lever one-time. Be sure that the perforation and sprocket-teeth fit properly.

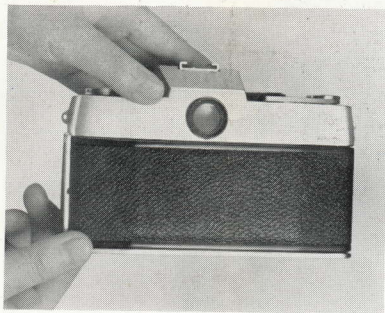

Closing the back cover


Close the back cover by just pushing the cover back to the original position.



For your 1st picture

Cock the camera by turning the film advance lever and press the shutter release button. Repeat this operation. Then turn film advance lever just before your picture-taking. Now you are ready to snap your first picture.

HOW TO USE FULLY COUPLED CdS METER

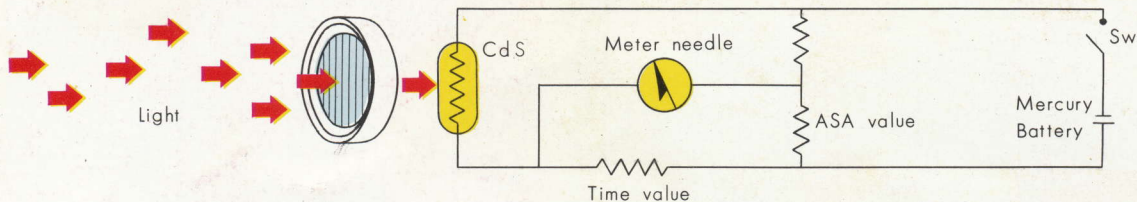

1. After loading film, set the Film ASA Scale Ring to the number of film in use.
2. Set the shutter speed dial to the proper number according to the subject. (Use hi-speed for out-door and slow-speed for indoor)
3. Cock the advance lever to wind up one frame of film and set the CdS meter ON simultaneously.
4. Center the meter needle to the indication in the viewfinder by turning the Aperture Scale Ring while shifting the camera toward the subject. And the camera insures you the proper exposure EVERY TIME.




Meter Needle and Indication Mark
can be seen in the view-finder.

DEPTH OF FIELD TABLE

PETRI F 1.8 55 mm

(in feet)

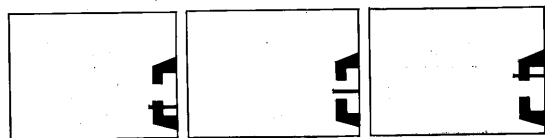

Less

Right

Over



When replacing Mercury Battery, first unscrew the battery compartment and insert the new battery so as to put the marking (+) on the top. (See the picture)

Exposure Meter Coupled Range Chart

L.V.4~L.V.18

(ASA 100)

F.L.V. F.NO	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
1.8	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000						
2.8	1/2	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000					
4	1	1/2	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000				
5.6		1	1/2	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000			
8			1	1/2	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000		
11				1	1/2	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000	
16					1	1/2	1/4	1/8	1/15	1/30	1/60	1/125	1/250	1/500	1/1000

F NO feet	1.8	(2)	2.8	4	5.6	8	11	16
2	1.977 2.023	1.974 2.026	1.964 2.037	1.949 2.053	1.929 2.076	1.900 2.110	1.868 2.151	1.810 2.234
2.5	2.463 2.538	2.459 2.542	2.443 2.560	2.419 2.886	2.398 2.628	2.344 2.679	2.294 2.746	2.205 2.886
3	2.946 3.055	2.940 3.062	2.917 3.087	2.883 3.227	2.838 3.181	2.774 3.265	2.705 3.367	2.580 3.583
4	3.903 4.101	3.893 4.113	3.851 4.160	3.791 4.333	3.713 4.334	3.603 4.495	3.485 4.693	3.277 5.132
5	4.848 5.161	4.833 5.179	4.767 5.255	4.675 5.374	4.556 5.539	4.389 5.808	4.214 6.145	3.911 6.928
6	5.781 6.236	5.758 6.263	5.697 6.375	5.535 6.550	5.368 6.796	5.137 7.212	4.897 7.744	4.428 9.020
8	7.614 8.428	7.573 8.478	7.415 8.686	7.188 9.015	6.915 9.486	6.526 10.333	6.141 11.472	5.511 14.589
12	11.145 12.998	11.057 13.119	10.719 13.627	10.250 14.470	9.686 15.767	8.946 18.219	8.234 22.118	7.131 37.823
30	25.125 37.188	24.677 38.215	23.046 42.920	20.491 55.900	18.712 75.473	16.115 105.702	13.924 145.993	11.018 177.417
∞	154.902 ∞	136.314 ∞	99.540 ∞	69.627 ∞	49.762 ∞	34.832 ∞	25.993 ∞	17.417 ∞

(in meter)

F NO meter	1.8	(2)	2.8	4	5.6	8	11	16
0.6	0.593 0.607	0.592 0.611	0.589 0.611	0.588 0.622	0.579 0.631	0.572 0.650	0.561 0.644	0.544 0.668
0.7	0.691 0.710	0.689 0.710	0.685 0.722	0.672 0.731	0.651 0.745	0.629 0.759	0.607 0.772	0.523 0.797
0.8	0.788 0.813	0.786 0.814	0.781 0.820	0.772 0.829	0.762 0.841	0.747 0.860	0.730 0.883	0.701 0.931
1.0	0.980 1.021	0.978 1.022	0.969 1.032	0.957 1.046	0.941 1.066	0.917 1.098	0.892 1.136	0.848 1.248
1.2	1.172 1.230	1.168 1.233	1.156 1.247	1.138 1.268	1.115 1.298	1.082 1.346	1.047 1.404	0.986 1.532
1.5	1.455 1.548	1.450 1.553	1.431 1.575	1.403 1.610	1.368 1.658	1.319 1.737	1.267 1.836	1.177 2.065
2.0	1.920 2.087	1.911 2.096	1.878 2.137	1.831 2.203	1.771 2.296	1.688 2.451	1.603 2.655	1.461 3.167
3.0	2.823 3.201	2.804 3.225	2.733 3.325	2.632 3.486	2.500 3.728	2.345 4.611	2.183 4.792	1.925 6.790
5.0	4.524 5.589	4.475 5.663	4.295 5.980	4.050 6.529	3.768 7.440	3.404 9.408	3.071 13.437	2.581 19.491
10.0	8.252 12.689	8.093 13.082	7.510 14.920	6.797 18.910	6.035 29.329	5.148 39.361	4.419 59.361	3.466 89.419
∞	47.192 ∞	42.444 ∞	30.321 ∞	21.222 ∞	15.160 ∞	10.611 ∞	7.918 ∞	5.305 ∞



Image in micro-lenses can be seen accurately ONLY when it is correctly focused.

 


Image can be seen in correct focusing condition and to compare focusing with in micro-lenses to get standard in proper focus.

Zone to see the depth of field of lens in use. If you can set accurate image range at full setting!

HOW TO FOCUS

- As you turn the focusing ring while looking through the viewfinder, you will notice where you can see the subject clearly. And by looking through micro-image zone in the center of viewfinder, you can adjust your focusing of image very sharply.
- In order to observe the sharpness in focusing the background of subject, set the Auto-Manual Ring to Manual operation and look through the viewfinder with a small lens opening.


Synchro-Flash Photography

In order to take Synchro-Flash Photography, connect the cord of flash-gun to Synchro-terminal of camera-body and select the proper shutter speed referring to the chart below.

$\frac{1}{1000}$	$\frac{1}{500}$	$\frac{1}{250}$	$\frac{1}{125}$	$\frac{1}{60}$	$\frac{1}{30}$	$\frac{1}{15}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{2}$	1
F P Class Bulb										
				F Class Bulb						
				M Class Bulb						
				Speed Light						

How to hold your camera

The point is for you to hold your camera steadily to avoid the blurring of your camera in your releasing the button.

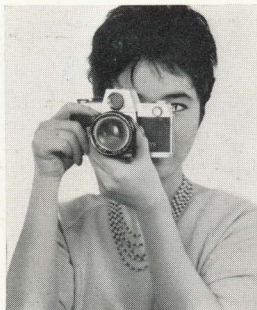


Horizontal Position




Vertical Position

FILM UNLOADING

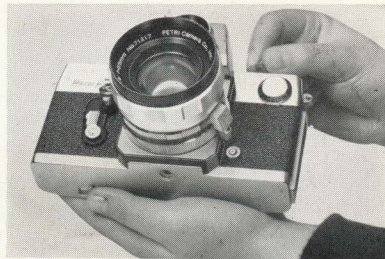


Rewinding Film

Pull the rewind crank and turn it to the arrow direction while pressing the return button located at the bottom of camera-body. Be sure that the film is completely rewinded into the cartridge.

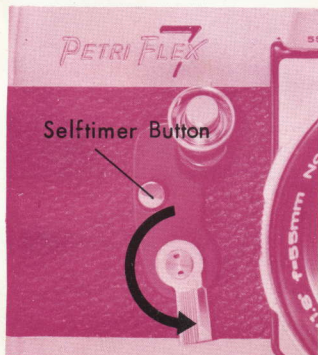

How to use Selftimer

- Pull down the selftimer lever to the end (180°) in the direction of arrow-marking and release the selftimer button, then about 10 seconds after releasing it, the film will be exposed.
- You can set the selftimer lever in-between to shorten the release time and just release the button.

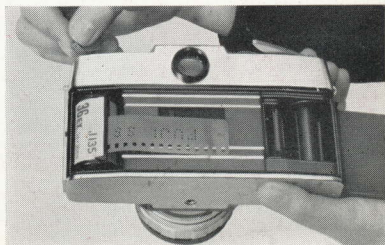


Removing Film

When you feel no resistance, open the back-cover to remove the cartridge out of compartment.



Versatile PETRI Interchangeable Lenses

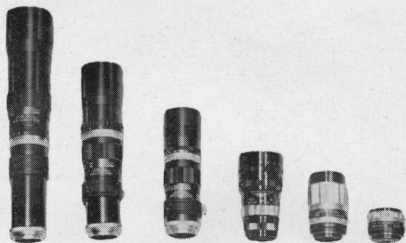

The following Interchangeable Lenses are available:

PETRI F3.5 35 mm Wide Angle Lens
(Automatic Diaphragm)

PETRI F3.5 135 mm Telephoto Lens
(Automatic Diaphragm)

PETRI F3.5 180 mm Telephoto Lens
(Preset Diaphragm)

PETRI F4.5 200 mm Telephoto Lens
(Preset Diaphragm)

PETRI F5.5 300 mm Telephoto Lens
(Preset Diaphragm)

PETRI F6.3 400 mm Telephoto Lens
(Preset Diaphragm)

PETRI F8 500 mm Telephoto Lens
(Preset Diaphragm)

PETRI LENS HOOD



PETRI LENS HOOD has been carefully designed to prevent stray light from entering the lens of your PETRI FLEX 7. Made of light alloy metal black-coated to prevent the reflecting light inside of hood. It fits tightly and securely over the lens rim.

PETRI FILTERS



Y1, Y2 (Yellow) : For outdoor portrait and landscape

YA3 (Orange) R1 (Red) : For giving contrast to landscape photos

PO1 (Green) : For human portrait

 
UV (Transparent) : To absorb ultra-violet ray

For Color Photography :

W4 (Moisture adjusting), C4 (Cold adjusting), C8 (Flash-photography)

& C12 (Flood-lamp Photography)

PETRI BELLOWS & ANGLE FINDER



PETRI BELLOWS extends to full 5" with a 55mm focal length lens, subjects as small as 10mm X 15mm can easily be close-up. PETRI ANGLE FINDER can be mounted snugly on the frame of the viewfinder window.



Sign of GOOD DESIGN

PETRI Camera Company, Inc.

1 Umejima-machi, Adachi-ku, Tokyo, Japan

PETRI CAMERA CORP. OF EUROPE

15, Anna Paulownastraat, The Hague, Holland

PETRI CAMERA CORP. OF OKINAWA

3, Nishi-Shinmachi, Naha, Okinawa

Petri cameras are sold in major cities all
over the world.