

This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org

ФОТОСНАЙПЕР



PHOTOSNIPER



ATTENTION!

The present Instruction Manual contains brief characteristics and essential rules of using the PHOTOSNIPER photogun.

Before using the photogun, make thorough study of the handling rules according to the present Manual to master correct procedures.

Minor differences between the Description and your photogun may be due to ever-advancing development of the camera and complete set parts design.

To ensure long period and trouble-free operation of the camera the following should be kept in mind:

Do not touch the surfaces of the optics with hands as it may cause damage of the coating.

Do not turn the release button, if not necessary, while releasing the shutter to avoid the cutting out of the shutter setting mechanism.

Do not rotate the shutter speed dial in the interval between "B" and "500".

While cocking the camera shutter, always turn the setting lever up to the mechanical limit to avoid blank frames on the film.

Check the work of the shutter before loading the camera. To do this turn the shutter cocking lever with one or more movements up to the mechanical limit. Then press the release button.

APPLICATION AND ADVANTAGES

The PHOTOSNIPER photogun is a combination of a special TAIR-3-PhS long focus lens and the ZENIT-ES reflex camera. For simple, quick and comfortable photographing of moving objects the lens with the camera is mounted on a gun stock with a grip fitted with a release mechanism.

The photogun is designed for taking close-up pictures of animals, birds and plants under natural conditions.

The photogun can be successfully used for sports photograph as well as for taking close-up pictures of distant architectural details.

The ZENIT-ES camera has many attractive features including an instant return mirror providing continuous watching of the subject to be photographed (except the moment of exposure), built-in exposure meter (particularly valuable when photographing on a colour film), shutter setting lever and hinged back cover.

In the photograph of 13×18 cm size (5 times magnification of the negative picture size) one can distinguish the details that can be clearly seen through the field-glass. The size of the details distinguishable in the picture equals approximately to $1/10\,000$ of the taking distance.

The ZENIT-ES type camera of the photogun is fitted with a built-in uncoupled exposure meter and an


instant return mirror. Unlike the ZENIT-E camera, it has an additional release button at the bottom of the camera body (coupling the camera with the grip trigger), more remote exit pupil of the viewfinder eyepiece (for comfortable shooting) and 42×1 mm thread that makes possible to use lenses from the Praktica, Asahi Pentax, Pentacon, Edixa, etc. cameras as interchangeable ones.


Using the reflex viewfinder (ground glass focusing) and extension rings, one can do reproduction works, take pictures with large magnification (macrophotography) and photograph with the aid of microscope (microphotography).

The standard long focus TAIR-3-PhS lens has an automatic spring-loaded ("jumping") pre-set diaphragm closing down to the pre-set position at the moment of shooting (when pressing the release trigger of the grip).

The lens is fitted with a quick focusing device which enables to focus the lens continuously without removing the left hand from the gun stock and to set the diaphragm and release the shutter by pressing the release trigger, when required.

The optical surfaces of the TAIR-3-PhS lens have an "amber" coating, which ensures correct colour rendition when photographing on a colour film.

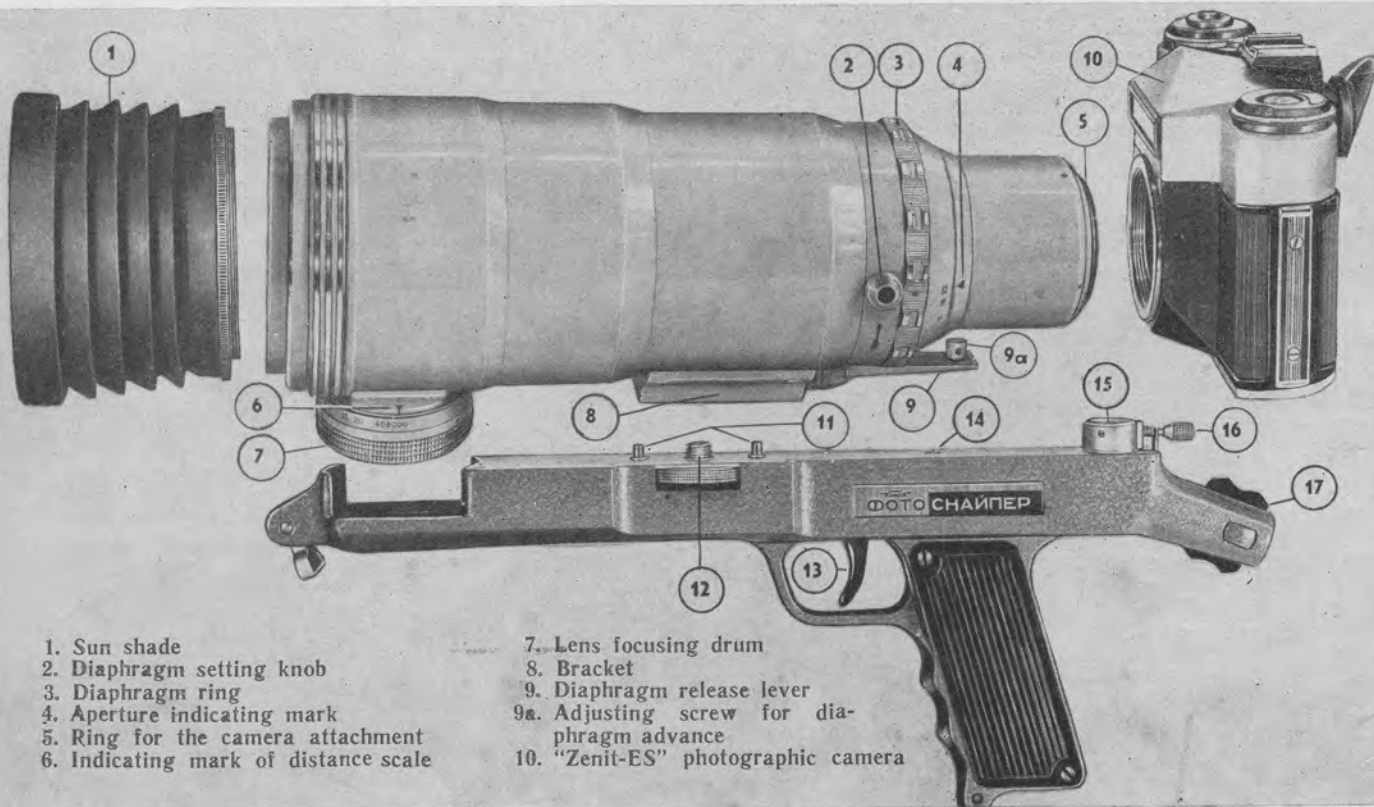


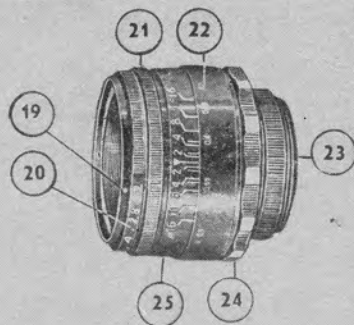



- 18. Shoulder butt
- 19. Diaphragm setting ring index
- 20. Diaphragm setting ring
- 21. Diaphragm ring with index
- 22. Distance scale



- 11. Guide pins
- 12. Tripod screw
- 13. Release trigger
- 14. Release pushing screw
- 15. Supporting ring
- 16. Clamping screw
- 17. Shoulder butt clamp

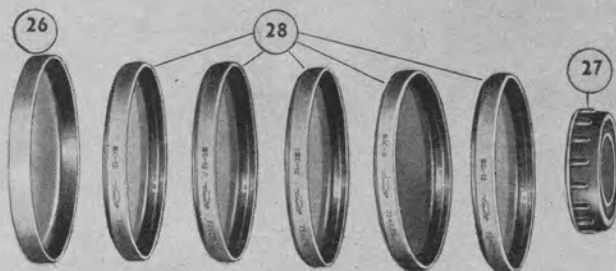


- 23. Ring for attaching the lens to the camera
- 24. Focusing ring
- 25. Depth-of-field scale with index
- 26. Cap, front
- 27. Cap, back
- 28. Light filters

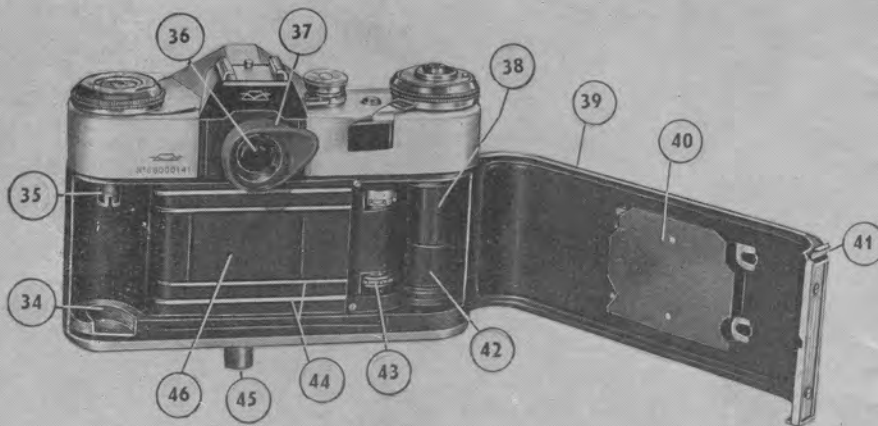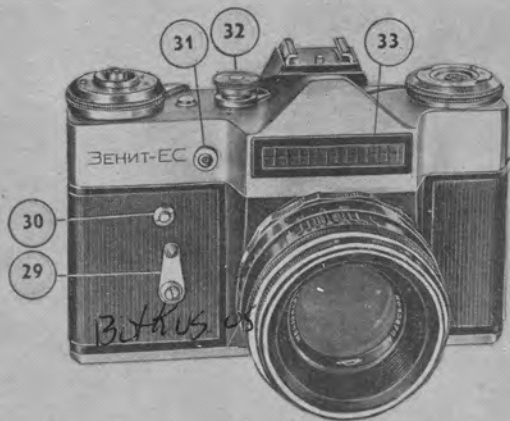


- 29. Self-timer setting lever
- 30. Self-timer release button
- 31. Flash unit connector socket
- 32. Exposure time dial
- 33. Photocell
- 34. Cassette chamber
- 35. Cassette spool guide
- 36. Viewfinder eyepiece
- 37. Eye hood

- 38. Take-up spool
- 39. Swing back of the camera
- 40. Film pressure plate
- 41. Latch of the lock
- 42. Take-up spool spring
- 43. Sprocket
- 44. Film channel slides
- 45. Shutter release button
- 46. Film gate

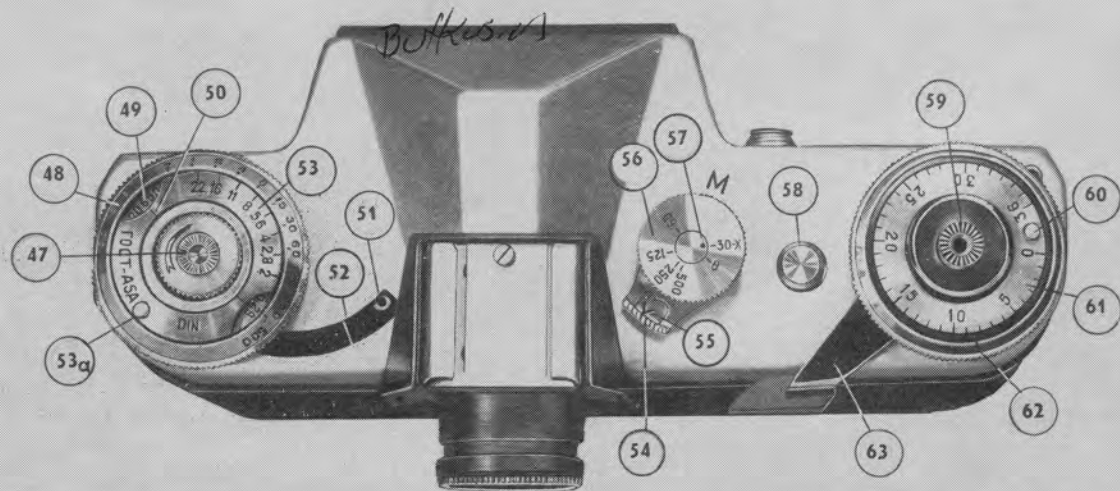


- 47. Film rewind knob
- 48. Exposure time scale of the calculator
- 49. Film speed scale
- 50. Film speed scale index
- 51. Calculator pointer
- 52. Exposure meter needle
- 53. Diaphragm scale of the calculator
- 53a. Guide of the calculator diaphragm scale
- 54. Synchronization setting lever

- 55. Synchronization lever index
- 56. Exposure time dial scale
- 57. Indicating mark of the exposure time dial scale
- 58. Film rewind release button
- 59. Shutter release button
- 60. Guide of the exposure counter dial
- 61. Exposure counter dial
- 62. Index of the exposure counter dial
- 63. Shutter setting lever

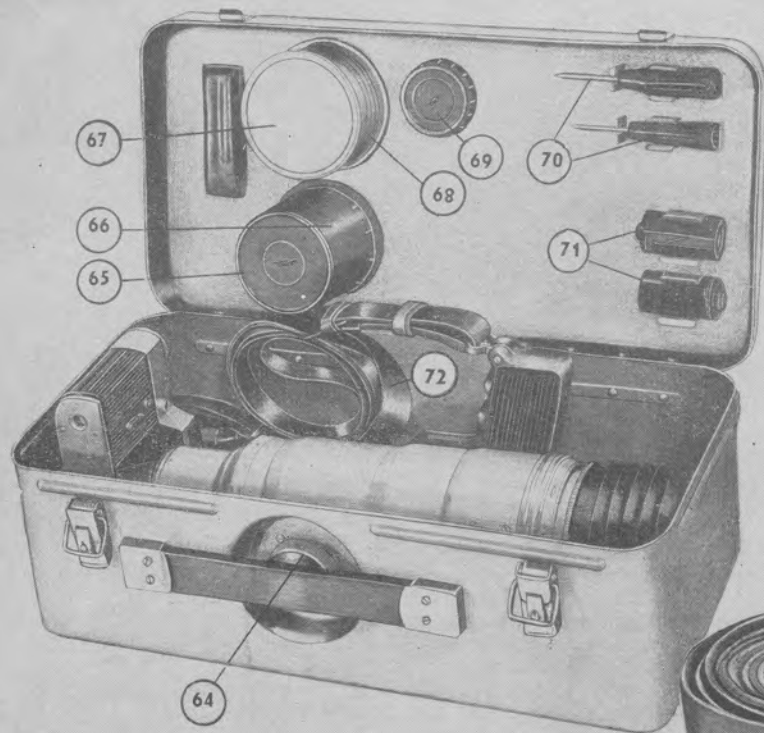

- 64. Clamping screw
- 65. Cap
- 66. Interchangeable lens (with cap)
- 67. Cover, front
- 68. Light filters
- 69. Cover back
- 70. Screw-drivers
- 71. Cassettes
- 72. Shoulder strap for the photogun
- 73. Shoulder straps for the case

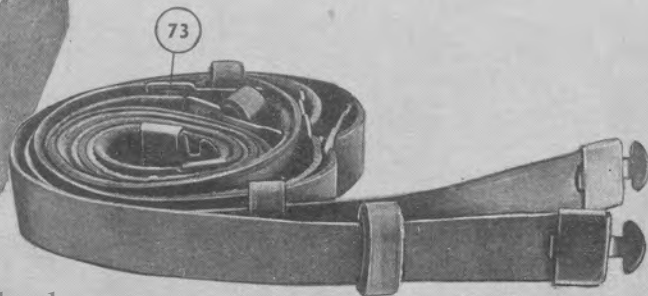

CASE WITH ACCESSORIES

The photogun with accessories is packed up in a stamped aluminium case where it is securely protected in any route conditions.

The TAIR-3-PhS lens with the ZENIT-ES photographic camera is fastened to a bracket with a clamping screw. The gun is also fastened to a bracket with a tripod screw.

Spring clamps secure the shoulder butt at the bottom of the case.

The inner side of the case cover carries:

- the HELIOS-44 lens under a hermetic cap;
- five light filters;
- two cassettes;
- two screw-drivers;
- two caps (front and back).

The case has sturdy locking catches, preventing accidental opening, a carrying grip and shoulder straps for carrying the case on a shoulder or on the back (like a knapsack) in route conditions.

The straps have buckles intended for varying the straps length. The complete set includes a rubber sunshade which is screwed on the TAIR-3-PhS lens (like the light filters). It is used to protect the lens from undesirable side-light. Besides that, it protects the lens and light filters against damage when photographing under complicated conditions.






↑ F=50

↓ F=300




BASIC DATA

Frame size, mm	24×36	
Width of perforated film, mm	35	
Number of frames	36	
Shutter speeds	from 1/30 to 1/500 sec (automatic), "B" (by hand) and slow shutter speed	
Viewfinder field of view, mm	20×28	
Eyepiece magnification	4.5x	
Lenses	TAIR-3-PhS HELIOS-44	
Focal length, mm	300	58
Relative aperture	f/4.5	f/2
Mechanical back focal distance (the axial distance between the film plane and the plane of the seating shoulder), mm	45.5	45.5
Seating thread of the lens	42×1	42×1
Minimum taking distance, m	3	0.5
Diaphragm scale	4.5 to 22	2 to 16
Sun shade seating shoulder	72×0.75	Ø55 mm
Light filter mounting thread	72×0.75	49×0.75
Tripod socket thread of the TAIR-3-PhS lens and the ZENIT-ES camera	3/8"	
Overall dimensions of the photogun ready for use, mm	140×235×560	
Overall dimensions of the photogun case, mm	170×210×390	
Weight		
of the photogun ready for use, kg	2.9	
of the photogun complete set in the case, kg	5.5	

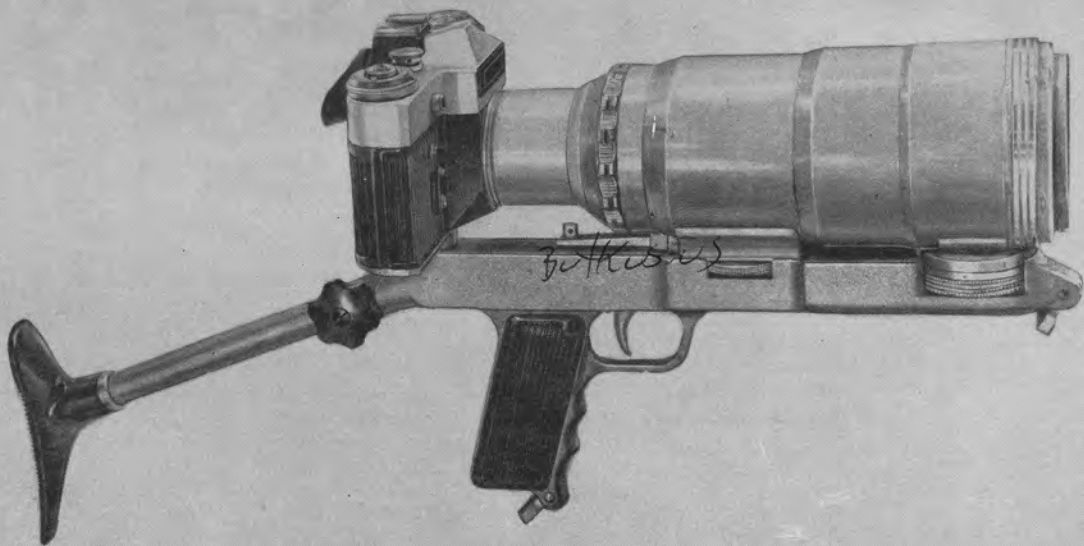

PREPARATION OF THE PHOTOGUN FOR PHOTOGRAPHING

1. Open the case.
2. Release the tripod screw of the gun stock and remove the stock from the case.
3. Holding the lens body with the left hand, screw out the clamping screw which fastens the lens with the camera to the bracket of the case; then remove the lens from the case.
4. Carefully join the stock to the lens. To do this put two guide pins of the stock into sockets of the lens bracket and the release button bush — into the hole of the carrier ring.
5. Tightly fasten the stock to the lens with the tripod screw.
6. Slightly fasten the clamping screw.
7. Remove the shoulder butt from the case, then put it in the socket of the stock and fasten it with a clamp.

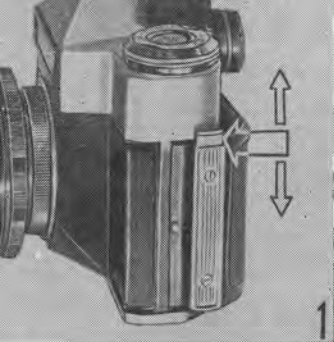

LOADING THE CAMERA

The camera is loaded at usual lighting in the following order:

1. Cut straight the end of the film. Open the back cover of the camera (fig. 1).

1. Cut straight the end of the film. Open the back cover of the camera.

2. Insert the cut end of the film under the take-up spool spring, and see that a sprocket tooth engage a sprocket hole. See that the film is placed correctly between the film channel slides (fig. 3).






3. Place the cassette into the cassette chamber. Before doing this, pull the film rewind knob upwards (fig. 2).

4. Return the film rewind knob into its initial position and fix it in this position by turning it in the the arrow direction (fig. 3).

5. Close the back cover and press down the lock latch (fig. 1).

6. Cock the shutter, turning the shutter setting lever to the stop (figs. 4, 5); then press the release button. The shutter being cocked, the film moves one frame. To transport non-exposed film to the film gate, cock the shutter three times each time pressing the release button. When setting the shutter see to it that the film rewind knob rotates. If not, check whether the camera is correctly loaded with film.

7. Turning the exposure counter dial set figure "0" against the indicating mark. Set the exposure counter dial with the shutter cocked.

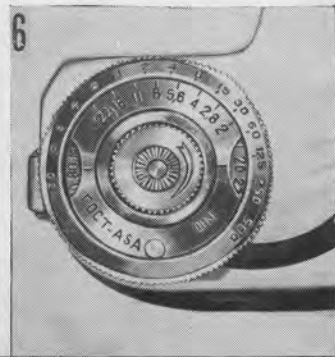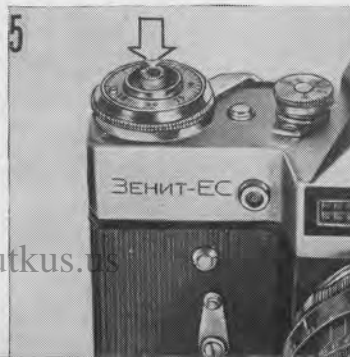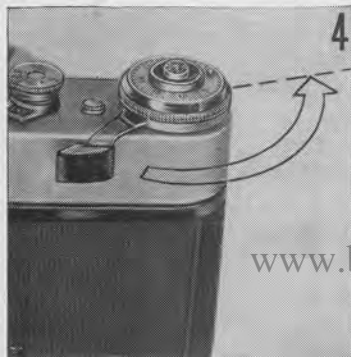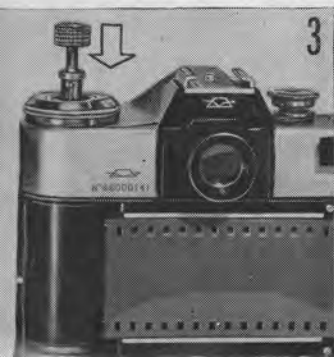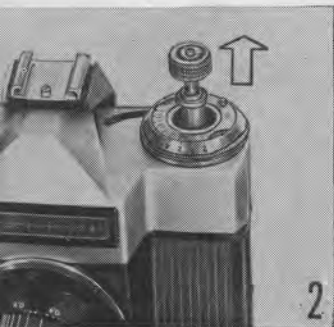

SETTING THE FILM SENSITIVITY

The film sensitivity dial is marked with figures 16, 32, 65, 130, 250, 500 indicating film sensitivity in FOCT-ASA units on one side and with figures 13, 16, 19, 22, 25, 28 indicating film speed in DIN grades on the opposite side. There are two dots under figure 32: the left one corresponds to the film sensitivity of 25 FOCT-ASA units and the right one — to that of 32 FOCT-ASA units.

Figures of the film sensitivity dial are seen in the windows of the diaphragm scale. The windows are provided with setting indexes. To set the film speed (for example 65 FOCT-ASA units) turn the diaphragm scale until the setting index matches with scale division 65. The same procedure should be performed in setting film sensitivity if the film is marked in DIN grades.


EXPOSURE DETERMINING

Aim the photogun at the object to be photographed. Turning the exposure time scale to the right or to the left, match the exposure meter needle with the center of the calculator pointer. (The needles can be observed in the window at the top of the camera). In this case the hatches of the exposure time scale and the diaphragm scale should coincide. The hatches are allowed not to coincide within $1/2$ of interval between the hatches.

With the needles matched figures on the scales allow to set a number of combinations of exposure times and diaphragms for some definite illumination and film sensitivity. With any of these combinations the negative obtained will be of normal density. Keep in mind that figures on the diaphragm scale indicate relative aperture values; figures from 500 to 2 on the exposure time scale show exposure time values in fractions of a second and those from 1 to 30 show whole seconds.

Black figures on the calculator diaphragm scale correspond to figures engraved on the exposure time dial. The exposure time and the diaphragm value chosen depending on conditions of photographing should be set on the camera and the lens.

Note. Exposure meter shows correct exposure in case of photographing with the lens, angular field of which is large enough, i. e. is near to the angular field of the photocell (for instance, the HELIOS-44 lens with angular field of 40°). When photographing with the TAIR-3-PhS lens (angular field of 8°) correct results are obtained if brightness of the photographed object within $40-50^\circ$ only slightly differs from that of the background.

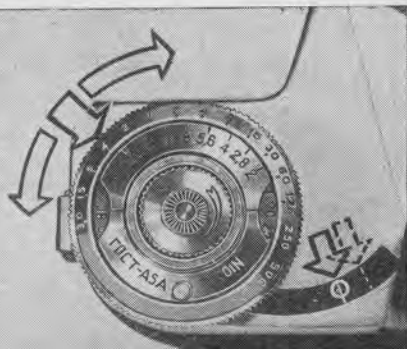

EXPOSURE TIME SETTING

Lifting up the exposure time dial and turning it round its axis set the selected exposure time value against the index mark in the middle of the dial. Figures on the exposure time dial indicate fractions of a second; "B" indicates hand-controlled exposure time.

To obtain slow shutter speed cock the shutter, set the exposure time dial at "B", press the release button and turn it counter-clockwise as far as it goes. After exposure return the button into initial position.

Notes: 1. The exposure time may be set both with the shutter cocked and released.

2. It is good practice to use a tripod when photographing at slow shutter speed and "B" exposure.

3. When photographing without flash lamps, the synchronization lever may be set in any position.

DIAPHRAGM SETTING


On the TAIR-3-PhS Lens

1. Lay the left palm on the lens body and turn the diaphragm setting button with the thumb to the stop in the arrow direction.

2. Turning the diaphragm setting ring, set one of the figures (4.5; 5.6; 8; 11; 16; 22) corresponding to the selected diaphragm against the index mark. Each of these positions is fixed with a click stop.



On the HELIOS-44 Lens

Set one of the figures (2; 2.8; 4; 5.6; 8; 11; 16) engraved on the diaphragm setting ring against the index mark (dot). The ring should be turned up to a click stop.

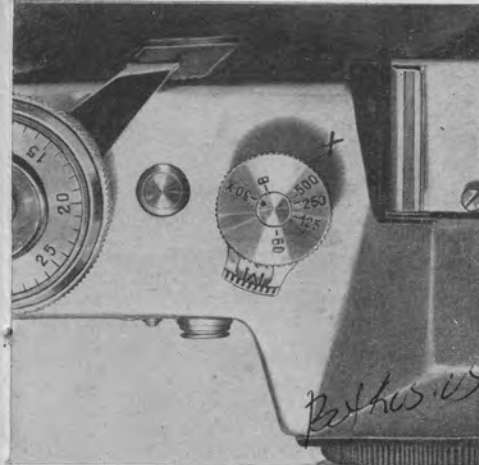


Comparative Table of film sensibility units ГОСТ, ASA and DIN

ГОСТ-ASA	<u>16</u>	20	25	<u>32</u>	40	50	<u>65</u>	80	100	<u>130</u>	160	200	<u>250</u>	320	400	<u>500</u>
DIN	<u>13</u>	14	15	<u>16</u>	17	18	<u>19</u>	20	21	<u>22</u>	23	24	<u>25</u>	26	27	<u>28</u>

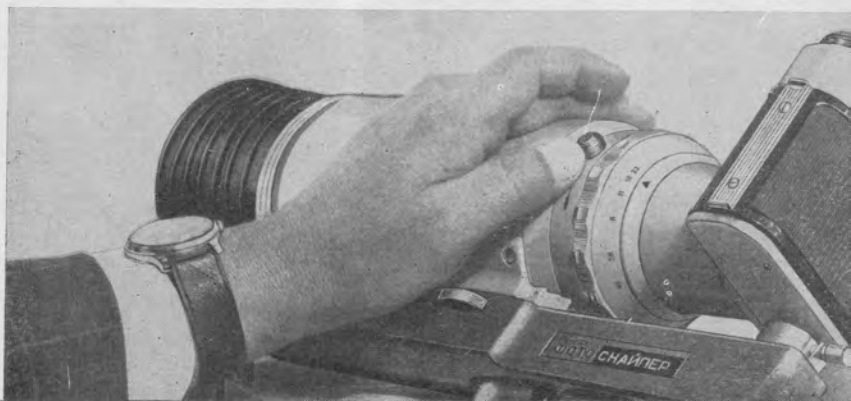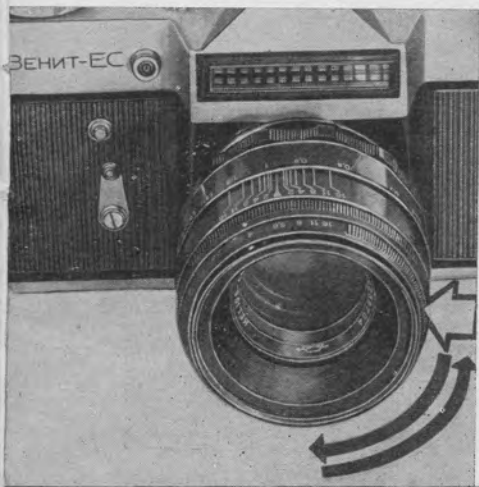



www.butkus.us

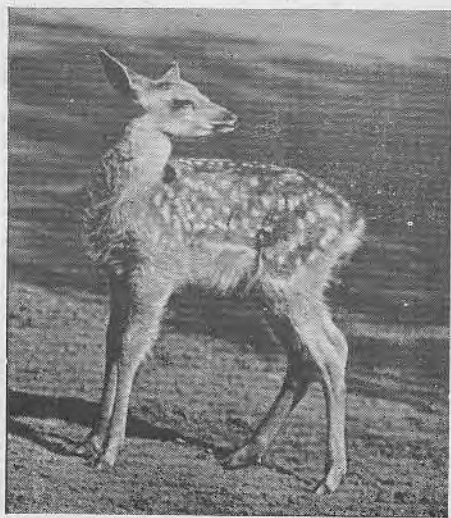

DEPTH-OF-FIELD TABLE FOR THE "TAIR-3-PHS" LENS
($f=300$ mm)

1:	4.5	5.6	8	11	16	22
D (m)	from — to	from — to	from — to	from — to	from — to	from — to
3	2.99— 3.01	2.98— 3.02	2.98— 3.02	2.97— 3.03	2.96— 3.05	2.94— 3.07
3.5	3.48— 3.52	3.48— 3.52	3.47— 3.54	3.45— 3.55	3.43— 3.57	3.41— 3.60
4	3.97— 4.03	3.97— 4.04	3.95— 4.05	3.93— 4.07	3.91— 4.10	3.87— 4.14
5	4.95— 5.05	4.94— 5.06	4.92— 5.08	4.89— 5.12	4.84— 5.17	4.78— 5.24
6	5.93— 6.07	5.91— 6.09	5.88— 6.13	5.83— 6.18	5.76— 6.26	5.68— 6.37
8	7.87— 8.14	7.84— 8.17	7.77— 8.25	7.69— 8.34	7.55— 8.51	7.40— 8.72
10	9.79—10.22	9.74— 10.28	9.63— 10.40	9.50— 10.56	9.29— 10.85	9.05—11.20
15	14.50—15.53	14.39— 15.67	14.14— 15.98	13.85— 16.38	13.38— 17.10	12.86—18.05
20	19.11—20.98	18.90— 21.24	18.47— 21.82	17.96— 22.59	17.16— 24.02	16.30—25.99
40	36.48—44.30	35.71— 45.49	34.14— 48.35	32.37— 52.47	29.81— 61.18	27.22—76.49
80	66.84—99.60	64.26—105.97	59.29—123.19	54.07—154.66	47.16—269.92	40.92— ∞
∞	400 — ∞	322 — ∞	225 — ∞	164 — ∞	113 — ∞	82 — ∞

Notes: 1. D—distance in metres—distance from the film plane to the object.

2. In depth of field calculation the circle of confusion was accepted to be equal to 0.05 mm.

FOCUSING THE LENS FOR IMAGE SHARPNESS

TAIR-3-PhS Lens

1. Turning the diaphragm setting button until it goes, open the diaphragm.

2. Acting like a rifle-man, observe the photographed object through the viewfinder eyepiece. To obtain sharp image of the object on the ground glass screen of the viewfinder rotate the lens focusing drum with fingers of the left hand.


If you want to photograph a group of objects unequally spaced from the camera, use should be made of the depth-of-field table. Required diaphragm should be selected according to this table. For example: with the lens set at 40 m and diaphragm of $f/11$ objects spaced within 32 to 52 m will be sharp on the film.

HELIOS-44 Lens

1. Open the diaphragm turning the diaphragm ring counter-clockwise as far as it goes.

2. Aim the camera at the photographed object and, observing through the viewfinder eyepiece, turn the lens focusing ring until sharp image of the object is obtained on the ground glass screen.

3. Close the diaphragm to the pre-set position by turning the diaphragm ring clockwise as far as it will go. With different combinations of distance and diaphragm values the depth-of-field limits are determined with the help of the depth-of-field scale made on the HELIOS-44 lens.

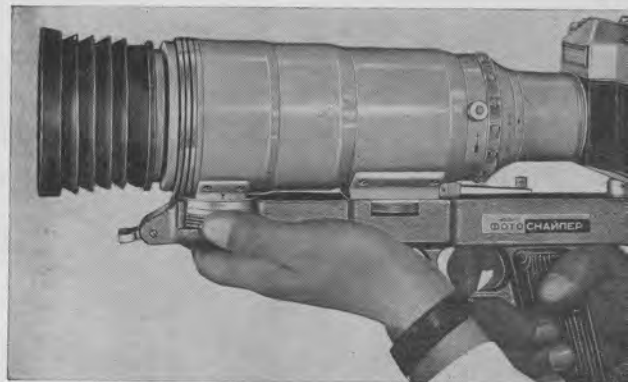

The depth-of-field scale consists of number pairs symmetrically spaced on both sides from the indicating mark. Each number pair corresponds to a definite diaphragm opening. After focusing two values on distance scale can be read against such a pair of numbers. These distance values indicate the depth-of-field limits.

For instance, with the lens focused at 4 m and an aperture of $f/11$ the image of objects placed within the range of 2.5 to 10 m will be sufficiently sharp on the film.



PHOTOGRAPHING WITH THE "PHOTOSNIPER" PHOTOGUN

1. Prepare the photogun for picture taking (see page 11).

2. Select a light filter according to the type of film, conditions of photography and the scene, and screw it into the lens mount.

3. Screw the sun shade into the light filter or the lens mount.

4. Load the camera (see page 12).


5. Set the film sensitivity value on the film sensitivity scale of the camera.

6. Determine exposure time and aperture value (see page 13) and set the values on the exposure time dial and the lens diaphragm ring.

7. Acting like a rifle-man, look through the viewfinder eyepiece and aim the camera at the object to be photographed. Focus the lens by rotating the focusing drum and then smoothly, without jerks press the gun trigger.

To prepare the photogun for taking the next picture turn the diaphragm setting button and the shutter setting lever with your left hand. At the same time support the photogun with your right hand to keep it ready for use.

When the TAIR-3-PhS is used with small apertures, a slight vignetting of the image edges is possible, which is practically of no importance.

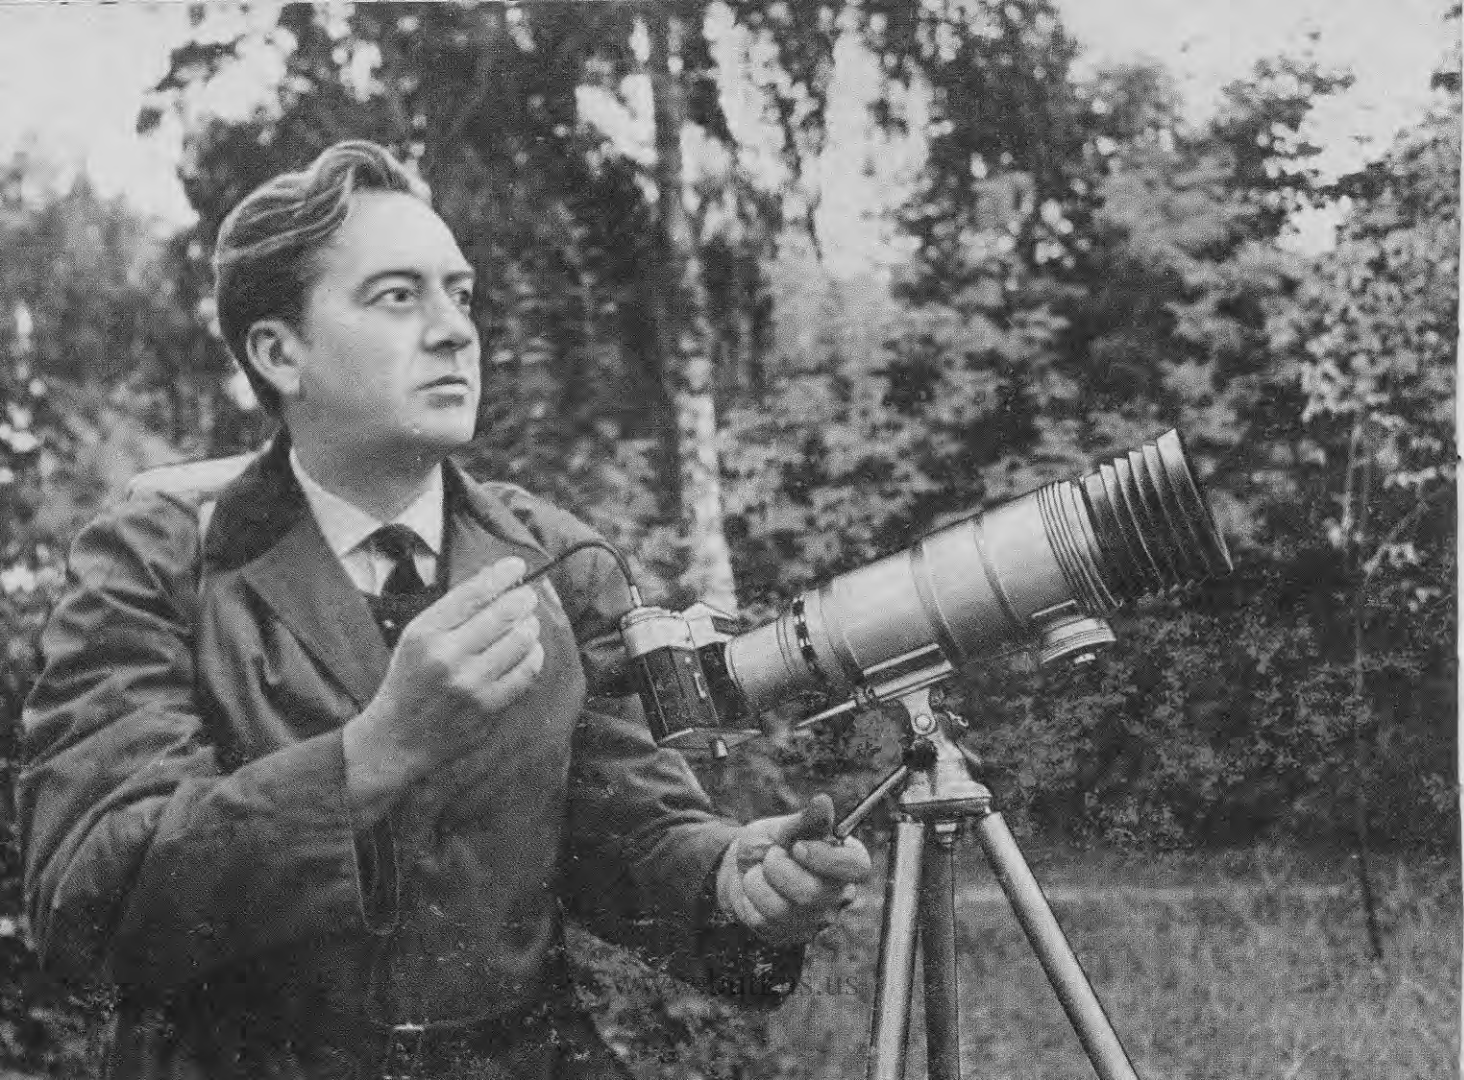

A. With the TAIR-3-PhS Lens at Slow Shutter Speeds

To photograph with the TAIR-3-PhS lens at shutter speeds slower than 1/60 sec (for instance, 1/30 or 10 sec) the photogun should be set on a tripod; otherwise the obtained picture may happen to be unsharp.

To work with the camera mounted on a tripod act as follows:

1. Remove the lens with the camera from the case. Having loaded the camera, mount it on the tripod using threaded socket of the bracket.
2. Open the diaphragm by moving the button in the arrow direction as far as it will go.

B. With HELIOS-44 Lens

1. Open the case and, holding the lens body with your left hand, loosen the clamping screw and remove the lens with the camera out of the case.

2. Carefully unscrew the TAIR-3-PhS lens out of the camera and immediately cover the thread with a back cap having taken it from a ring in the case.

3. Place the lens in the case and fasten it with the clamping screw.

4. Having removed a hermetic cap, unscrew the HELIOS-44 lens out of the seating socket on the inner side of the case cover and mount it on the ZENIT-ES camera.

5. Load the camera with film.

6. Set the film sensitivity.

3. Set the required aperture.

4. Set the shutter speed on the camera dial.

5. Aim the photogun at the object to be photographed.

6. Focus the lens.

7. Holding the lens body carefully press the diaphragm release lever from below.

8. Cock the shutter.

9. Press the release button at the top of the camera.

7. Using the exposure meter, determine exposure time and diaphragm opening and set these values on the camera and the lens.

8. Open the diaphragm by turning the diaphragm setting ring counter-clockwise as far as it will go.

9. Looking through the viewfinder eyepiece aim the camera at the object to be photographed. Turning the focusing ring, focus the lens.

10. Close the diaphragm to the pre-set value by turning the diaphragm ring clockwise as far as it will go.

11. Keeping the photographed object in the viewfinder frame, smoothly, without jerks, press the release button.

C. With Flash Bulbs

For photographing in poor illumination use should be made of flash bulbs or electronic flash. For this aim the ZENIT-ES is fitted with a special device which synchronizes the bulb flash moment with the shutter operating time. To switch on a single action flash bulb the synchronization setting lever should be set at "M". When operating with an electronic flash kit, set the synchronization setting lever at index "X". Only exposure time of 1/30 (i. e. when the shutter is completely opened) may be used in the ZENIT-ES camera if photographing with either flash bulbs or electronic flash.


Photographing with flash bulbs at "B" exposure is not advisable since a considerable amount of stray light (after flash) gets into the camera resulting in a blurred image on the film.

D. With Self-timer

To photograph with self-timer, do the following procedure: mount the photogun on a tripod or fix it in any other way; cock the shutter; wind the self-timer mechanism by turning the self-timer setting lever downwards as far as it will go; set the exposure time; choose the frame; focus the lens by a definite place of the frame; close the diaphragm to the stop and, having pressed the self-timer release button, take your place before the camera.

The shutter operates in no less than 9—20 sec after pressing the button.



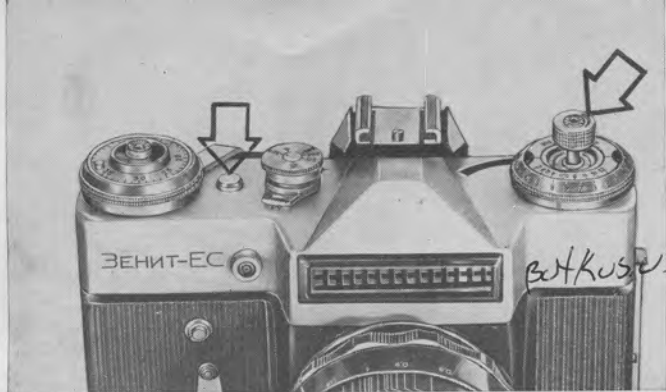

UNLOADING THE CAMERA

When the exposure counter dial shows figure 36 it means that the exposed film should be rewound into the cassette.

The procedure is the following:

1. Press the film rewind knob and turn it contrary to the arrow direction.
2. Disengage the shutter mechanism by pressing the film rewind button. Keeping the button in this position, rotate the film rewind knob in the arrow direction until you feel by the applied force that the film end is pulled out from under the take-up spool spring.
3. Open the back cover of the camera.
4. Pull the film rewind knob upwards and remove the cassette out of the camera.



ACCESSORIES

LIGHT FILTERS

The complete photogun set includes five light filters: **Yellow filter Y-2x** is widely used in landscape photography; improves right colour rendition of blue, green and yellow objects; emphasizes clouds and increases contrast of shadows and remote objects; eliminates the effect of atmospheric haze.

Colourless filter UV-1x eliminates the influence of ultraviolet rays (for instance, in high-mountain conditions) in black-and-white and especially in colour photography.

Light yellow filter Y-1.4x improves rendition of visual brightness correlations of blue, green and yellow objects in portraiture with natural illumination, in photographing landscapes under clouded blue sky and the evening illumination when operating at brief exposure times.

Orange filter O-2.8x is used in taking pictures of remote objects when it is necessary to reduce the effect of atmospheric haze; it increases the contrast of such objects. In usual photography the sky in the photograph is very dark and clouds are bold.

Yellow-green filter YG-2x is of especial value for correct colour rendition (in particular, of red and green colours) on panchromatic films. The filter is used in portraiture both by day and artificial light, in artistic and technical photography of paintings and colour pictures.

FILTER FACTOR TABLE
(by day light)

Films	Light filters				
	UV-1x	Y-1.4x	Y-2x	O-2.8x	YG-2x
Filter factor					
Isopanchromatic	1	1.5	1.5-2	2.5	1.5
Panchromatic	1	1.5	1.5-2	2.5	4


Note: Filter factor is the ratio between the exposure time used when photographing with a light filter and the one required when photographing without a light filter (illuminating conditions are the same).

CASSETTES

The camera set comprises three film cassettes. One cassette is placed in the camera and two others are fastened on the case cover.

SCREW-DRIVERS

Sometimes, when "hunting" with the photogun, simple adjustment can be needed. To this end the camera set comprises two screw-drivers (4 mm and 1.7 mm) attached to the case cover.

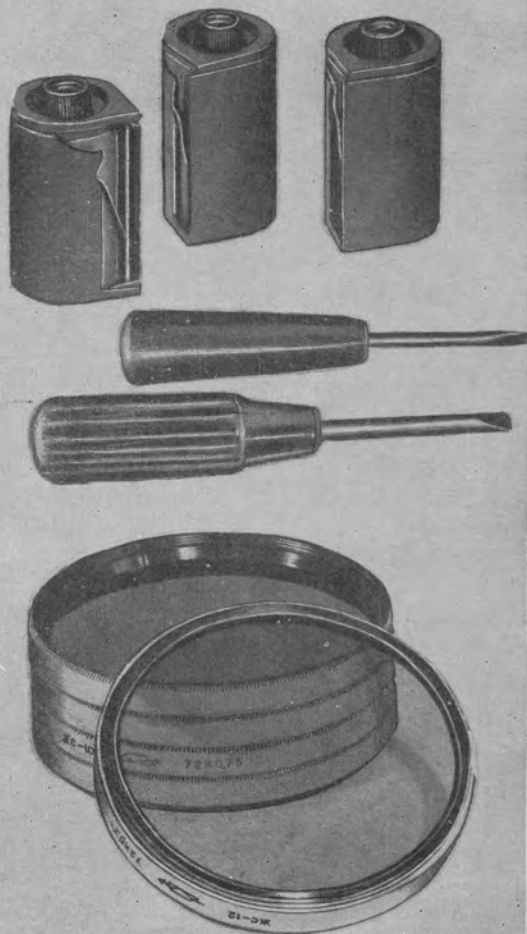



www.butkus.us

CARE OF THE CAMERA

The photogun should be handled carefully, should be kept clean and protected from mechanical damages, moisture and sharp temperature fluctuations.


Keep the photogun in a closed case. In such cases the diaphragm of the TAIR-3-PhS lens should be set at "22", the diaphragm setting knob, the shutter and the self-timer be released.

Never remove the lens from the camera (unless you need it) to prevent dust and dirt from getting on the surfaces of optical parts.

Clean the optical coated lens surfaces only from outside with a clean soft piece of fabric or cotton, slightly moistened with rectified alcohol, ether (petroleum or sulfuric) or, if these means are absent, with toilet eau-de-Colonge.

As the photogun is a complex optical mechanical device, any repair of the camera and its adjustment should be performed by a highly qualified specialist.

Carrying the case in route
conditions

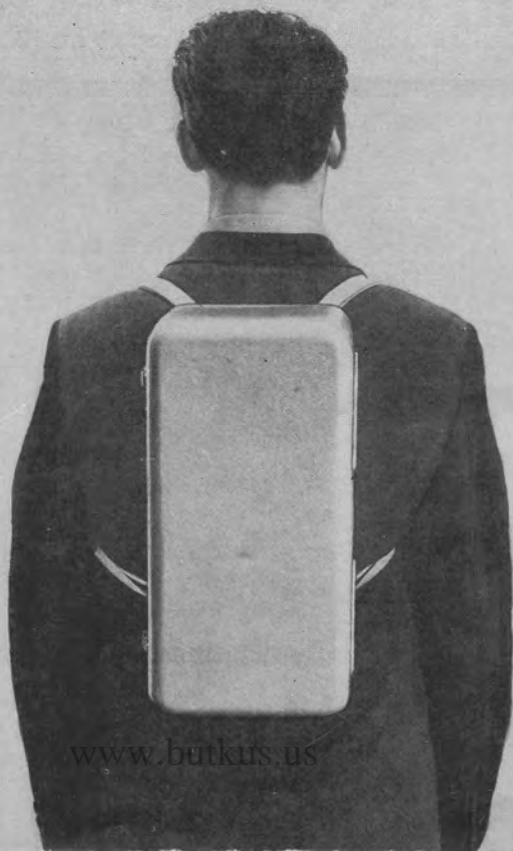

www.butkus.us