



This manual is for reference and historical purposes, all rights reserved.

**This page is copyright© by M. Butkus, NJ.**

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

**If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.**

**This will allow me to continue to buy new manuals and pay their shipping costs.**

**It'll make you feel better, won't it?**

**If you use Pay Pal or wish to use your credit card,  
click on the secure site on my main page.**

PayPal Name [Lynn@butkus.org](mailto:Lynn@butkus.org)

Power Zoom AF DSLR Flash  
INSTRUCTION MANUAL

**Vivitar**  
SERIES 1

## Introduction

Thank you for purchasing the DF-383 digital power zoom flash gun. Your electronic flash is innovatively designed for both digital cameras and film cameras with features that are leading photography into the digital era. Advanced technology is used in your flash to control the correct amount of light output. Please take a few minutes to read the instruction manual before using.

## Compatibility

Check to see which item number you have purchased to see compatibility

*Digital TTL / Auto Focus flash for:*

DF-383-CAN - Canon Digital E-TTL, E-TTL II cameras & E-TTL film cameras

DF-383-NIK - Nikon Digital TTL, i-TTL cameras & TTL, i-TTL film cameras

DF-383-OP - Olympus and Panasonic Digital TTL cameras

DF-383-PEN - Pentax Digital P-TTL & film cameras


DF-383-SON - Sony Alpha & Konica Minolta Digital ADI, D Lenses cameras & TTL film cameras

## Features

- LCD Display
- Auto and manual zoom from 24-28-35-50-70-85mm
- Red focus assist beam for low light focusing
- TTL metering
- Automatic shutter speed setting
- 5 levels of power ratio 1/1, 1/2, 1/4, 1/8, and 1/16
- Flash readiness indication in viewfinder
- Front and rear curtain synchronization
- Red eye reduction (Type NIK, OP & PEN)
- Built-in slave function
- Built-in reflecting plate and diffuser
- Power saving function

## A Look at Your Flash


Note: Both the reflecting plate and the pull out diffuser are housed inside of your flash. When you would like to use them, you can slide them out and slide them back in when you're finished for easy storage.

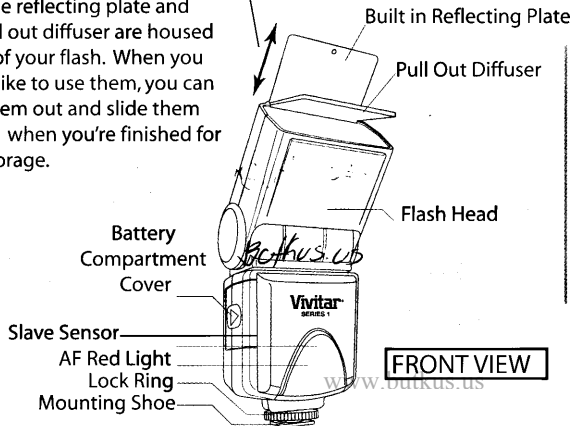

Special Mounting Shoe for SON and OP flashes





Type SON Mounting Shoe




Type OP Mounting Shoe

# A Look at Your Flash


- |                         |                               |
|-------------------------|-------------------------------|
| 1. LCD Display          | 11. Mode Selector             |
| 2. Auto Check Indicator | 12. Film Speed Selector       |
| 3. Mode Indicator       | 13. F/Stop Selector           |
| 4. Beeper Indicator     | 14. Beeper on/off             |
| 5. Power Level Setting  | 15. Zoom Selector             |
| 6. Flash Range Distance | 16. Back Light                |
| 7. Power Off Indicator  | 17. Ready / Test              |
| 8. Zoom Position        | 18. Power ON/OFF Switch       |
| 9. Film Speed Indicator | 19. Slave Mode Switch         |
| 10. F-Stop Indicator    | 20. Auto OK                   |
|                         | 21. Mode Indicator (NIK only) |

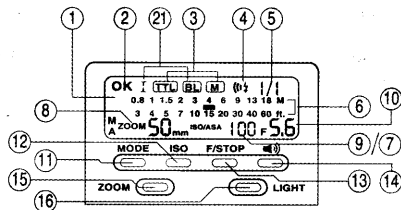

Type SON, NIK, OP



Type PEN



Type CAN

## Specifications

Guide Number (ISO 100): (45(m)/148ft) at 85mm position

Motor zooming reflector: 24 - 28 - 35 - 50 - 70 - 85mm

Power Source: 4x 1.5V AA size alkaline batteries

Flash Duration: 1/1,000 - 1/20,000 second

Recycling Time: 0.5 - 9 seconds

Number of Flashes: 80 times with fresh alkaline batteries

Color Temperature: Daylight

Dimensions: Approx. 72 x 100 x 125 mm


Net Weight: Approx. 270 grams (w/o batteries)

\* Specifications are subject to change without further notice.

\* For Minolta Dynax 3 and 5, select WL from the functional dial to the on position before using DF-383-SON.

## Loading Batteries


Make sure the On/Off Switch is in the Off position. Slide open the Battery Compartment Cover and insert 4 x AA batteries with correct polarity(-,+), as indicated in the battery compartment. Close the Battery Compartment Cover. Inserting batteries with the wrong polarity may cause the batteries to heat up, leak, explode and damage the flash. When you need to replace batteries, make sure all batteries are of the same brand, type and same capacity.

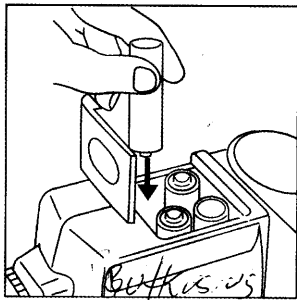




## Mounting the Flashgun onto Your Camera

- For Type CAN, NIK & PEN flashes: Loosen the lock ring. Slide the flash into the camera accessory shoe. Tighten the flash with the lock ring.
- For Type OP flashes: Insert the mounting foot of the flash into the camera accessory shoe and press "LOCK" to lock the flash in place.
- For Type SON flashes: Make sure the PUSH button is in "NORMAL" state. Insert the mounting foot of the flash unit into the camera's hot shoe. The safety catch can be heard to snap into place onto the hot shoe.

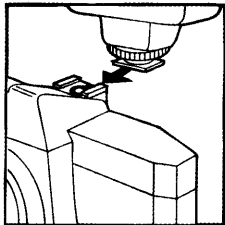

Type SON mounting foot




## Removing Your Flash

- For Type CAN, NIK & PEN flashes : Loosen the lock ring and remove the flash by pulling it backwards.
- For Type OP flashes: Press both sides of the Lock/Release Button towards the direction indicated by the arrow symbols and then take the flash off by pulling it backwards.
- For Type SON flashes: Press the "PUSH" button toward the flash and at the same time hold it lightly down to set it to "PRESS-IN" state. Then slide the flash backward, away from the camera. After releasing the flash from the camera, press the "PUSH" button upward to release it to "NORMAL" state.




Releasing the SON flash from camera's hot shoe

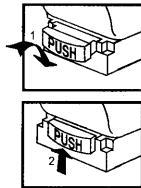

## ON/OFF Switch and Flash Test Operation

To switch on the flashgun, slide the main switch to the "ON" position. On the ready indicator "READY" lights up as soon as flash readiness is established. Press the Test Button to ensure the flashgun works properly. If the flashgun discharges, wait until the "READY" light glows again. To switch off, slide the main switch to "OFF" position.

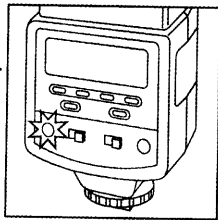

## Illumination of LCD display

The LCD display is used to show general information about your camera and the current status of the flashgun. Every time the "LIGHT" key is lightly tapped, the LCD display will be illuminated for about 5 seconds.

## Taking a Picture AF / TTL Operation

- *Automatic flash sync speed control*

When the flashgun is ready, your camera will automatically switch it to the flash sync speed from program mode or to an aperture-priority mode selected. The sync speed depends on the camera model and usually ranges between 1/30sec to 1/250sec.

When a flash shot has been taken, an "OK" symbol briefly flashes on the LCD display to confirm correct exposure.


- *Auto-focus "AF" measuring flash*

The integrated "AF" red light beam of the flashgun supports the automatic focusing of auto-focus TTL cameras. When the prevailing light is insufficient for automatic focusing, the flashgun will project a red light beam onto the object as soon as the camera's shutter is lightly touched. The camera's auto-focus system then focuses the object by this beam of red light.

- *TTL flash control*

When you switch on the flashgun, it will set at TTL mode first and the LCD display indicates "TTL". When the Ready indicator lights up, press the shutter release fully to take the picture. The advanced programming and computerized circuitry of the flashgun provides the correct amount of flash light output according to the camera's exposure measurement through the lens (TTL).

## Taking a Picture AF / TTL Operation

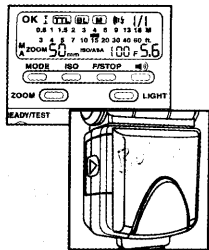

If you need to change the mode, simply press the mode selector.

For Canon type flashes, this flashgun's ETTL indicator will light while connected with ETTL cameras.

For Nikon type flashes, this flashgun's LCD Display will show TTL, I-TTL and BL in different ways while connected to different camera models. Please refer to your camera's manual.

### • *Manual flash mode at full light output*

To use the flashgun at full light output in the manual mode, the mode selector must be set to the M (Manual) position. The LCD display indicates M (Manual). A full-power flash will then be fired each time the flashgun is triggered. The LCD display automatically shows the flash-to-subject distance required for a correct exposure.

An adaptation to the individual shooting situation can be achieved by changing the lens diaphragm or the focal length (on the camera). 5 level "Power Ratios" of 1/1, 1/2, 1/4, 1/8 and 1/16 could be selected by slightly tapping the Mode selector when it is at the manual position.

## Front and Rear Curtain Synchronization


Front and rear curtain synchronization is supported, to use simply set into Front or Rear mode when using.

For Pentax, you could select the synchronization mode as front curtain (⚡▶) or rear curtain (▶⚡). The flashgun will fire according to the mode selected to match with the camera shutter. Canon, Sony Alpha, Konica Minolta, Nikon, Olympus and Panasonic cameras control front or rear-curtain synchronization, therefore settings for the flashgun are not required.

**Note:** The rear curtain synchronization is only possible on cameras with this feature. See your camera's instruction manual for details.

## Bounced and Swiveled Flash

Photos shot with full frontal flash are easily recognized by their harsh, dense shadows. This is often associated with a sharp drop of the foreground to the background. This phenomenon can be avoided with bounced and swiveled flashes. Diffused light will produce a soft and uniform shadow when the reflector is turned vertically at a 90° angle. Select white or reflective surfaces to bounce the light off. Otherwise your pictures will come with an unnatural color cast similar to that of the reflecting surface. When swiveling the reflector ensure that no direct light from the reflector reaches the subject. When using bouncing or swiveling flash, the zooming position will be locked in 50mm, except with Manual mode.

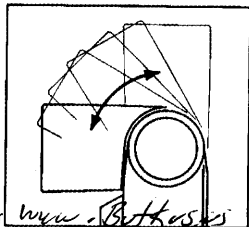


- *Reflecting plate and diffuser*

The flashgun has a built-in reflecting plate and diffuser. You can slide out the reflecting plate or diffuser from the top of the flash head. Bouncing the flash head and using the reflecting plate can produce better looking pictures. The diffuser can reduce strong light to create soft effects.

## Power Zooming

- *Automatic motor zoom control*

If you are using a zoom lens, which transmit its focal length to the camera, the camera will pass on this information to the flashgun. The flashgun then automatically adjusts its zoom position to comply with the focal length of the lens. Automatic motor zooming reflector control is only possible with cameras permitting digital data transmission to the flashgun.

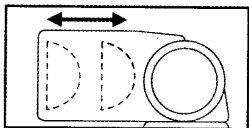

The LCD display on the flashgun indicates zooming positions of 24-28-35-50-70-85mm. When the flashgun is switched on, the activated zoom position is set at 35mm. As soon as the camera's shutter is lightly touched, the focal length of the flashgun is automatically adapted to the focal length of the lens.


Whenever the flash head is not at a normal position (facing to the front), such as in bounced or swiveled at different positions, the zoom position will be at 50mm as indicated by the LCD display with a brief flash in auto mode.



## Manual Motor Zoom Control

The "Zoom" key permits you to change the zoom reflector's position independently of the focal length of the lens. The LCD display then indicates "M" and adjusts the zoom position of the reflector.

By slightly tapping the "Zoom" key you can select the zoom position in the following sequence: 24-28-35-50-70-85mm. Auto Zoom position M24 M28 M35 M50 M70 M85 Auto Zoom position

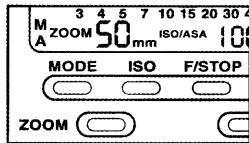

## Slave Function

This flashgun can perform as a wireless slave by switching the Slave Mode Switch to S position. The flashgun will automatically switch to M mode with power ratio 1:1. When the sensor detects the external flash fire, the flash will synchronize to the fire. The amount of light output can be controlled by selecting the power ratio from 1/1 to 1/16. If multiple flashes are set as slaves, you must consider the light amount to get the correct exposure. When the slave mode is on, the power saving mode will not function.

## Power Saving Function

The flashgun will automatically be switched to power saving mode 3 minutes after:

- the flashgun was switched on
- the last flash was fired

The LCD Display will show an "OFF" signal. To reactivate the flashgun, simply press any buttons underneath the LCD display panel or switch the main switch off and on again. The flashgun is not completely switched off, however its power consumption is drastically reduced. If you are not going to use your flashgun any longer, set the main switch to "OFF"

## Warning

- The flash unit does not function on camcorders.
- Misfiring sometimes occurs when the power switch is turned on and off continuously. If it happens, power off the flash unit for few seconds before switching it on again. The flash unit will then work as normal.
- Do not leave or store the flash unit in temperature exceed  $40^{\circ}\text{C}$ . This might adversely affect the internal structure or performance of the flash unit. Particularly, do not leave the flash unit in the automobiles during summer.
- Remove the batteries if you do not intend to use the flash unit for a long period of time.
- The flash unit is not water-resistant. Rain and humid weather may cause irreparable damages to the flash.
- The flash unit is composed of very delicate electronic parts. It should be protected against shocks, falls or other improper handling.
- The flash unit contains a high voltage condenser. Do not try to open the housing or repair the flash.
- Do not clean the surface of flash unit by any petrol, detergent solution or strong solvents. These solvents may cause damages to the flash.



[www.butkus.us](http://www.butkus.us)

## Limited One Year Warranty

Vivitar warrants this quality product to be free of defects in material and workmanship for a period of one year from the date of purchase. During the period, Vivitar will repair or replace the product at no charge for parts or labor.

### TIME PERIOD OF THIS WARRANTY

The time period of this warranty starts from the date of the original purchase and expires on the first anniversary date of purchase.

### WHAT IS NOT COVERED BY THIS WARRANTY

No express or implied warranty is made for any defects in this product which result from accident, abuse, misuse, failure to operate the product in accordance with relevant instructions, neglect, immersion in or exposure to chemicals or liquids, extremes of climate, fungus, excessive wear and tear/cosmetic damage and defects resulting from other extraneous causes such as unauthorised disassembly, repair or modification.

This warranty shall not extend to any incidental or consequential damages arising from the purchase, use or inability to use this product even if Vivitar has been advised of such damages. The laws of some countries and some States thereof do not allow the limitation of incidental or consequential damages, so the above limitation or exclusion may apply to you.

## WHAT TO DO WHEN SERVICE IS NEEDED

STEP 1. Package the product and relevant accessories carefully, using ample padding materials and a sturdy mailing container to prevent damage in transit.

STEP 2. Include in package:

- a) Evidence of date and place of original purchase (for example, a copy of your sales receipt).
- b) Detailed description of your problem.
- c) When possible, a sample evidencing the problem.

STEP 3. Return item (insured) to: Vivitar

Attn: Technical Support  
195 Carter Drive  
Edison NJ 08817

When service is complete, the product will be returned to you shipping prepaid. In the event the product is deemed to be not faulty or the defect is a result in wear and tear, Vivitar may levy a handling charge for the return of the product.

This warranty gives you specific legal rights. You may also have other rights which vary from country and State to State thereof.

For more information visit our website [www.vivitar.com](http://www.vivitar.com)

[www.butkus.us](http://www.butkus.us)