This manual is for reference and historical purposes, all rights reserved.
This page is copyright© by M. Butkus, NJ.
This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company

On-line camera manual library
This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

Fig. 1

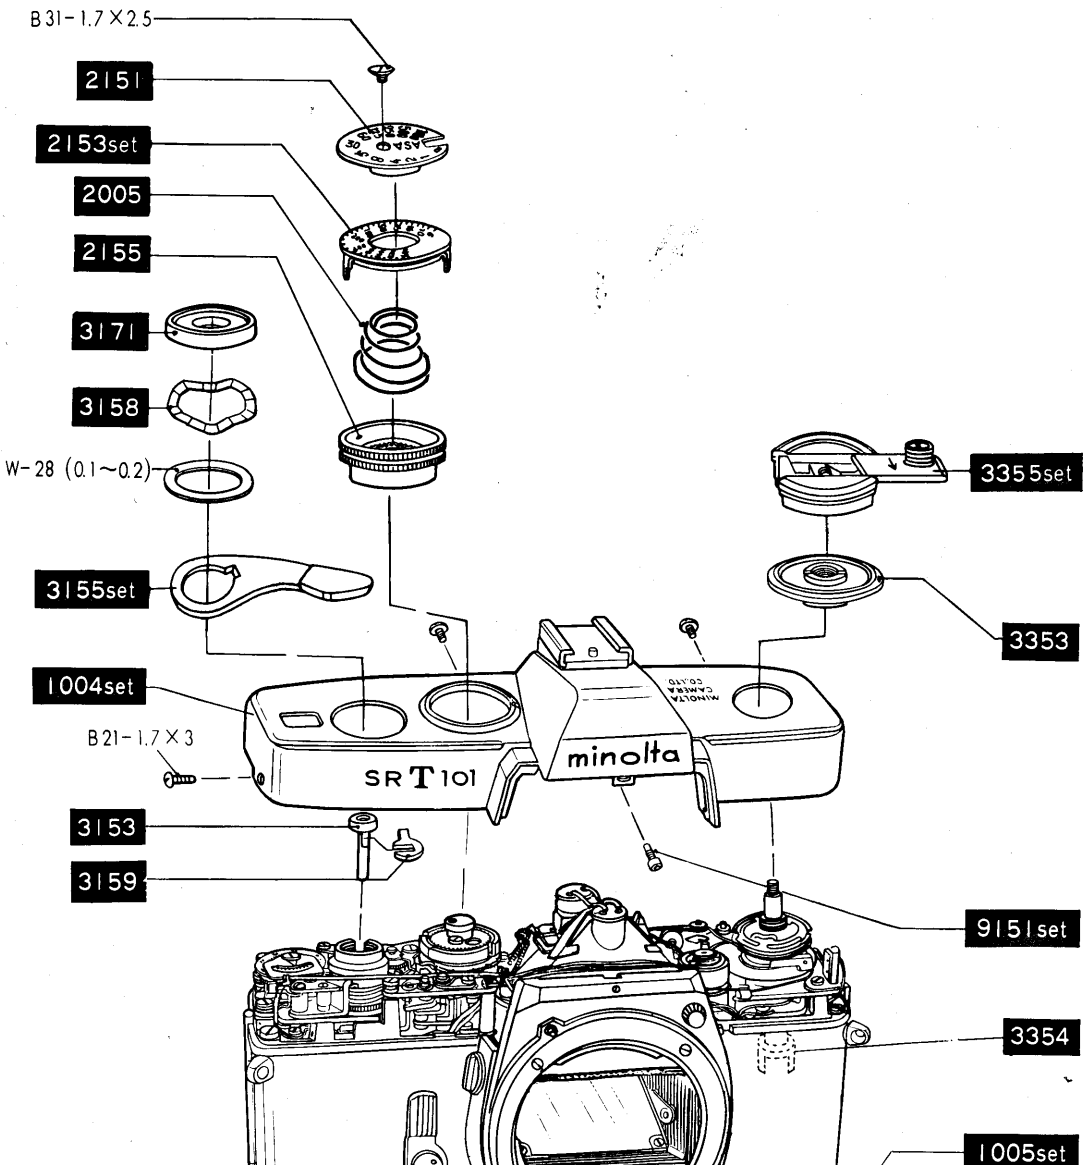
B31-1.7×2.5
2151
2153set
2005
2155
3171
3158
W-28 (0.1~0.2)
3155set
3355set
3353
1004set
B21-1.7×3
SRT101
minolta
3153
3159
9151set
3354
1005set

When the adjustment is to be made from the befinning, turn the adjustment screws about three turns to raise them from their initial positions where the adjustment screws have been screwed first. Then, start adjustment from such raised positions. When adjustment is made, care should be taken not to disconnect the lead wires or give damage to the meter since the yare located adjacent the adjustment screws. When the following adjustment from a) to d) is made and when you look the image, care must be taken to lightly press or hold the pinchers portion. Then, tighten three setscrews (9132) and check again if the image is in focus at such tightened position.

Fig. 25

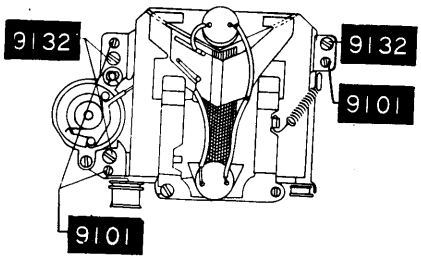

a) When the left portion is of a wave form as illustrated in the right figure, the left side is insufficient so that the focus adjusting screw on the left must be lowered for adjustment.

b) When the left portion is of crossing waves form, the left side is over or in excess so that the left side focus adjusting screw must be raised for adjustment. Conversely when the right side is of a wave form or crossing waves form, the right side is insufficient or excess respectively, so that the right side focus adjusting screw must be adjusted accordingly.

c) When the lower portion is of a wave form as shown in the right figure, the lower side is insufficient so that the lower focus adjusting screw must be lowered for adjustment.

d) When the lower portion is of crossing waves form, the lower side portion is in excess so that the lower

Fig. 26

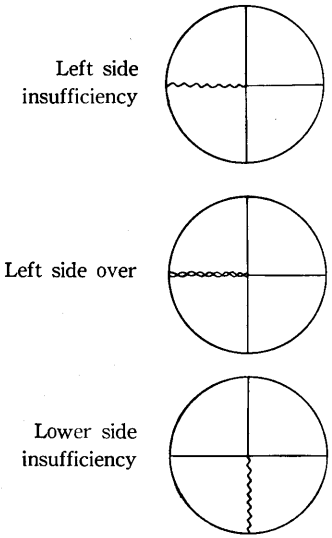

9. Engage the connecting string for a pointer (5053) and loosen two setscrews (B11-1.4×2.5) for the index position adjuster (2163) on the shutter mount base plate -A. Then move the adjuster (2163) in such a manner that the screw head of the setscrew is located at the center of the elongated slot of the adjuster (2163) and then tighten the setscrew. Set the shutter base plate -A to bulb and one knot portion of the index coupling string (5053) is inserted throuth the hole of the joint gear (2154) on the shutter mount base plate A and pulled out outwardly of the camera body from the beneath of the film sensitive ring (2010) so that the knot portion is engaged with the slot of the adjuster (2163), as illustrated in the figure. Rotate but not twist the shutter speed cam shaft (2156) unerneath the sensitive ring (2010) so that the coupling string (5053) may be engaged into the slot of the string pulley (4017). Rotate the cam shaft (5056) in the clockwise direction four times so that the notch portion of the cam shaft (5056) may be positioned at the right overhead position. Engage the coupling string (5053) with two position of the index pulley (5073) in such a manner that the coupling sting (5053) may not be twisted and connect the knot portion to the notch portion of the index spring outer tube (5056).

Fig. 28

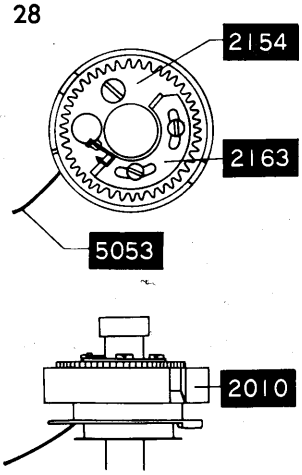

Fig. 29

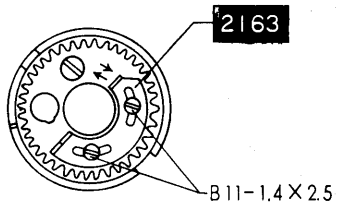

Fig. 30

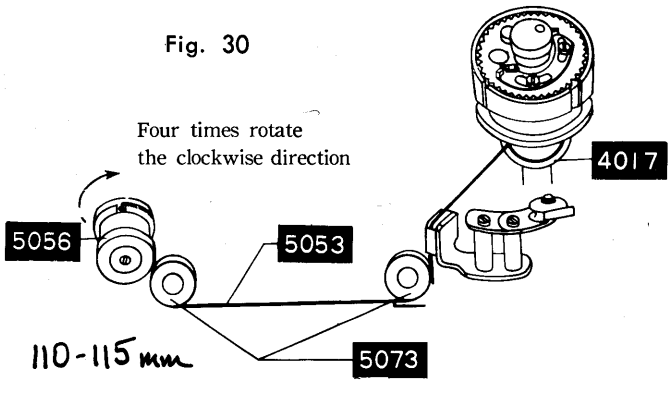

Next, set the shutter position of the shutter base plate A to 250 or 125 and install the coupling string (5053) in such a manner that the coupling string (5053) maybe set to the numeral 250 or 125 or the numeral indicator plate within the view-finder as illustrated in the figure and paste the same in position.

Fig. 31

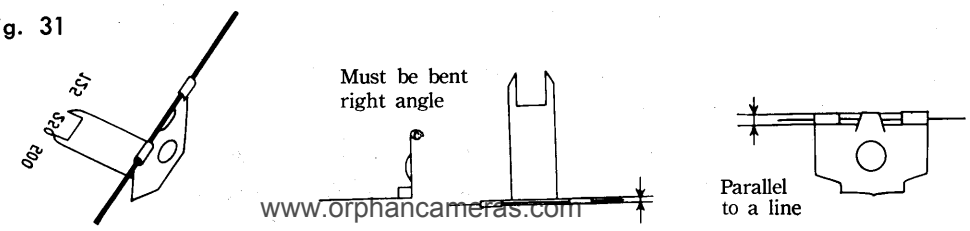

www.orphancameras.com