This manual is for reference and historical purposes, all rights reserved.
This page is copyright© by M. Butkus, NJ.
This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company


On-line camera manual library
This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of $3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you $7.50 for a electronic copy or $18.00 for a hard to read Xerox copy.


**This will allow me to continue to buy new manuals and pay their shipping costs.
It'll make you feel better, won't it?
If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PENTAX®

PC-33
PC-33 DATE

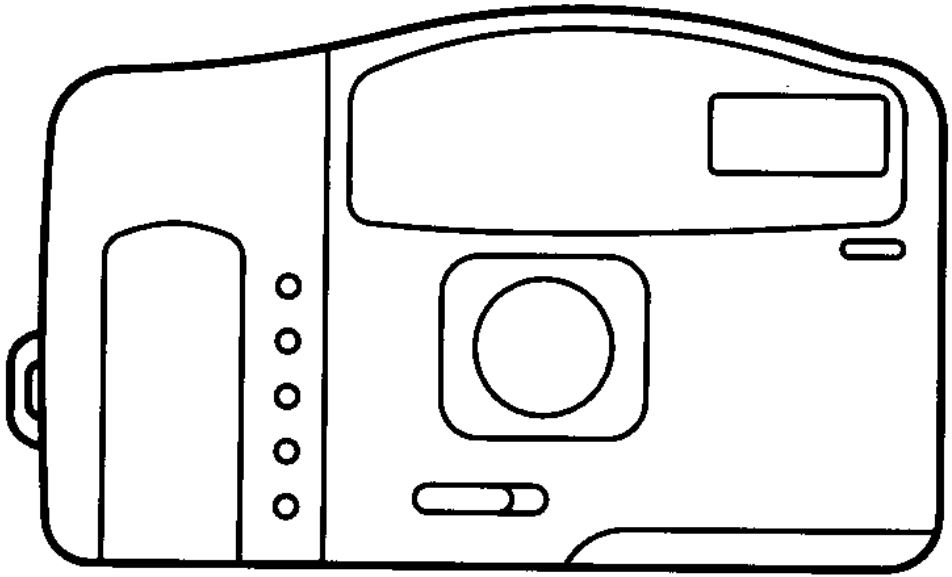

Operating manual
Bedienungsanleitung
Mode d,emploi
Manuale de instrucciones
manuale d,istruzioni
Livro de instruções
使用說明書

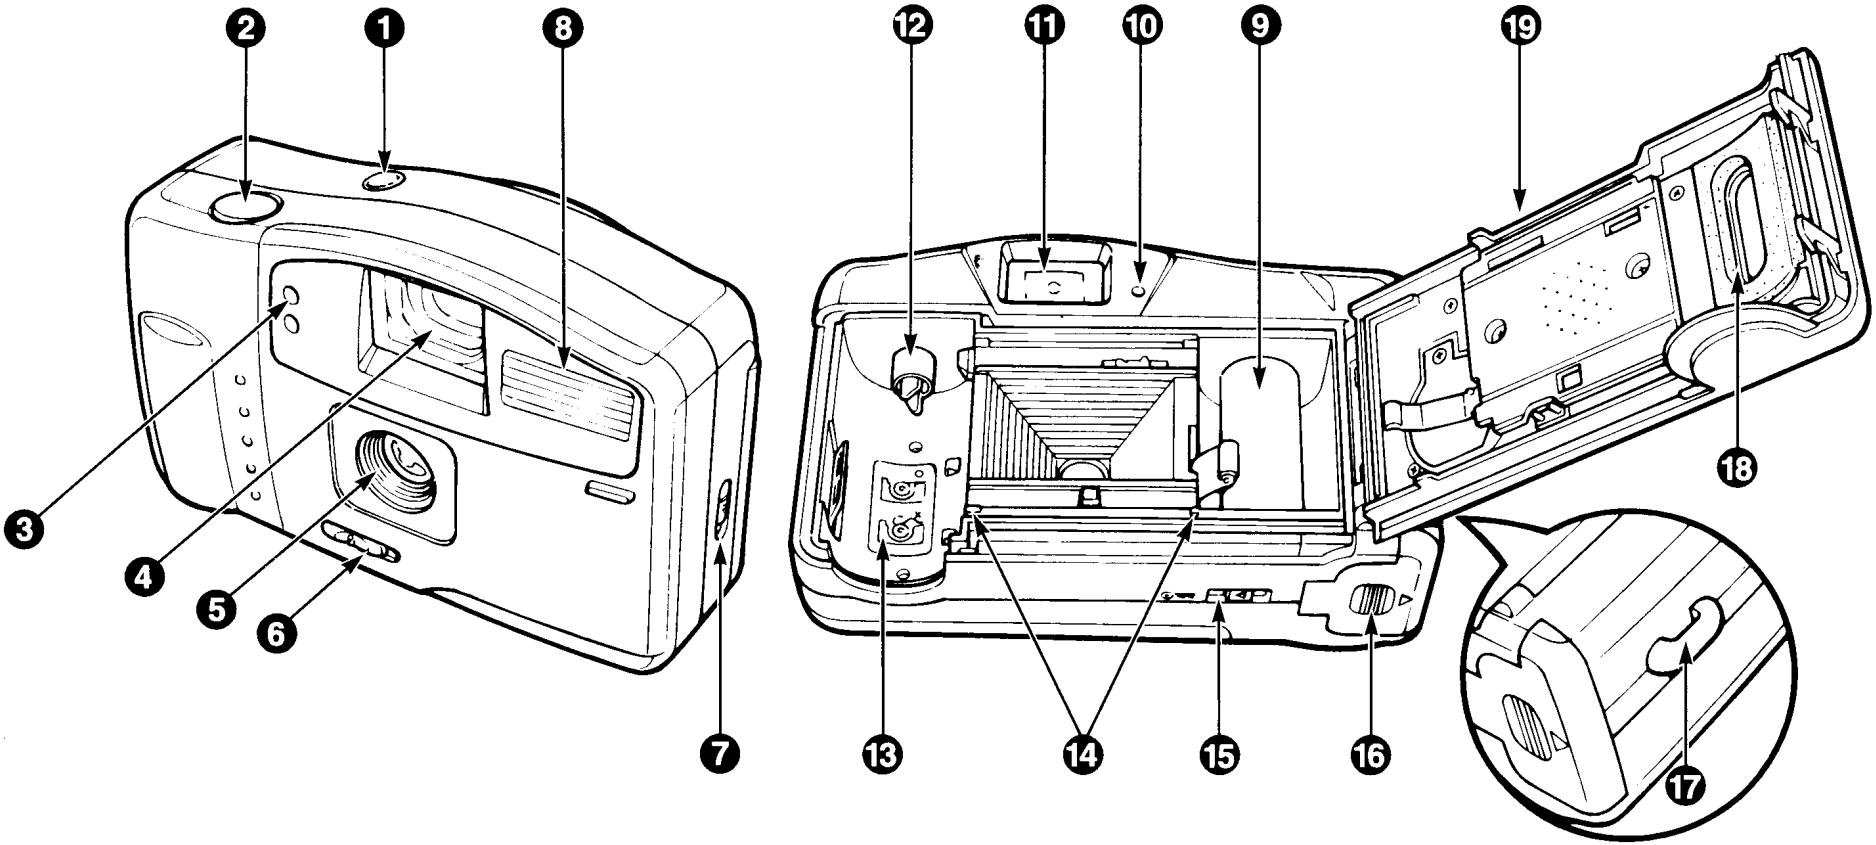

www.orphancameras.com

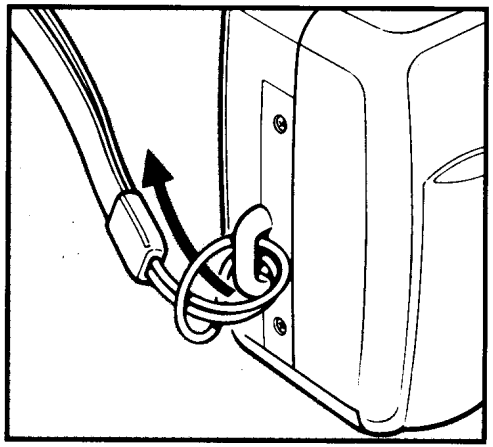


Fig.1 Abb.1 圖.1

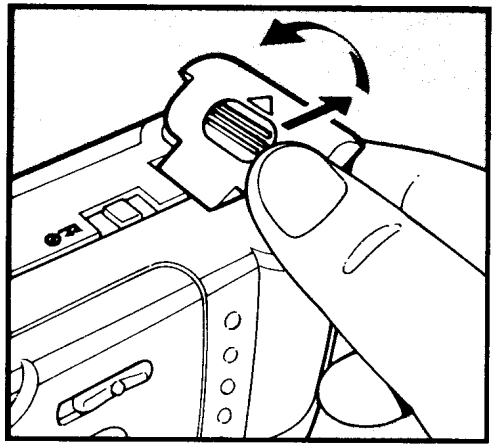


Fig.2 Abb.2 圖.2

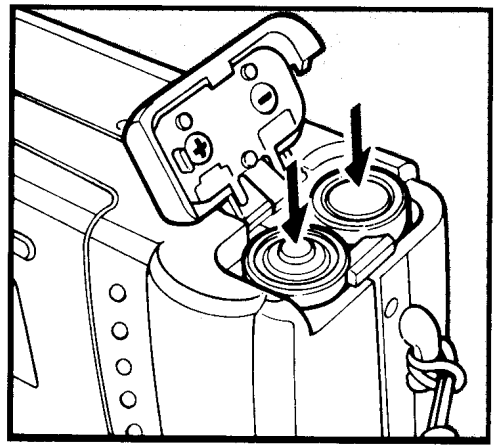


Fig.3 Abb.3 圖.3

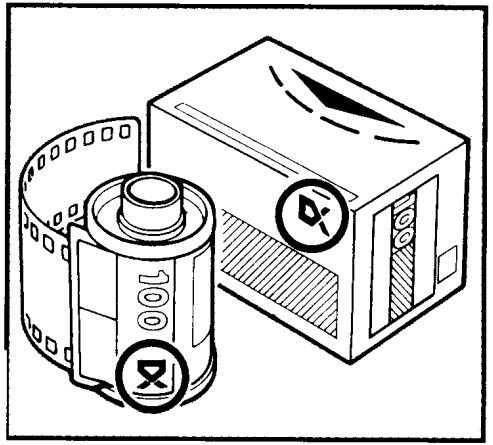


Fig.4 Abb.4 圖.4

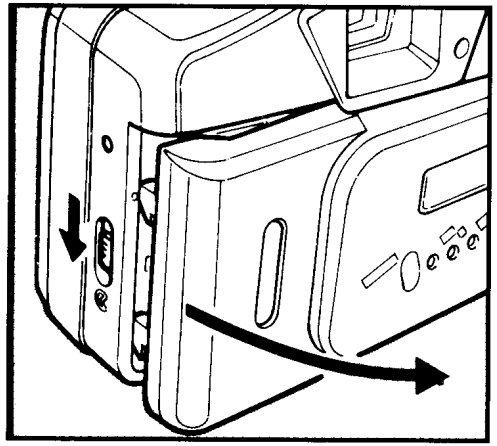


Fig.5 Abb.5 圖.5

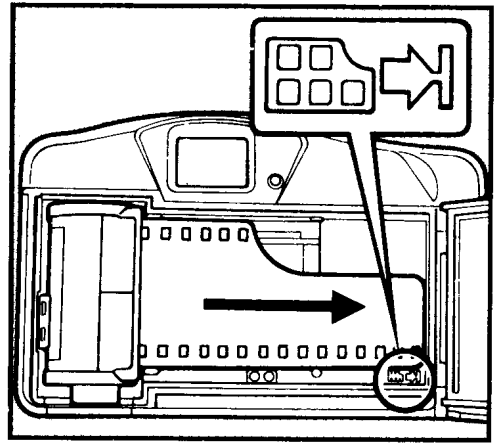


Fig.6 Abb.6 圖.6

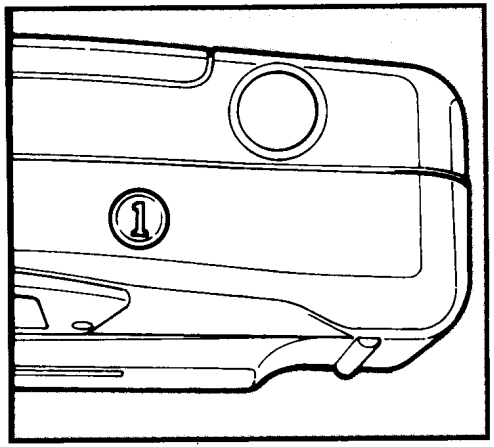


Fig.7 Abb.7 圖.7

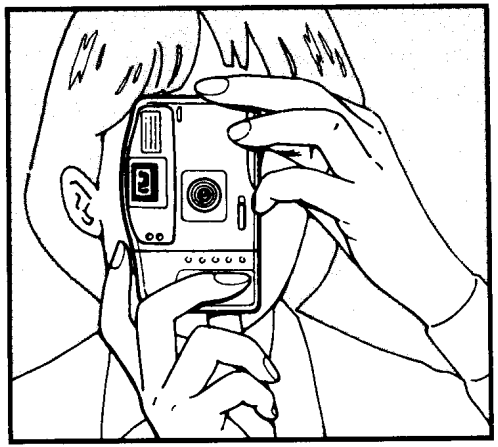
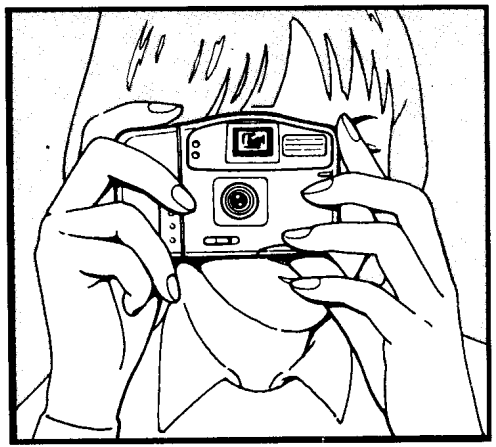
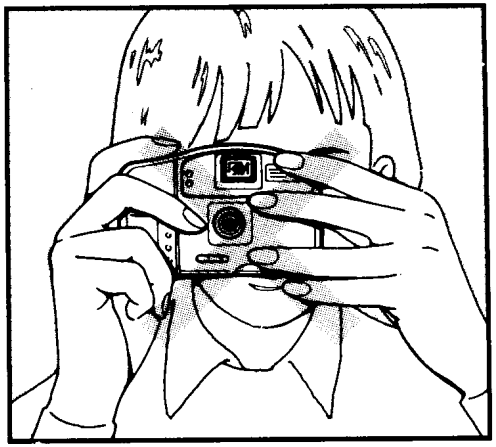


Fig.8 Abb.8 圖.8





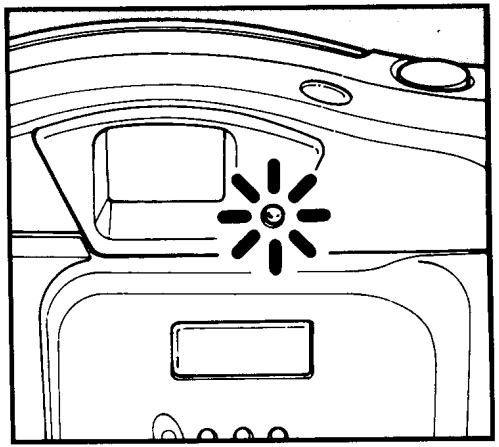


Fig.9 Abb.9 圖.9

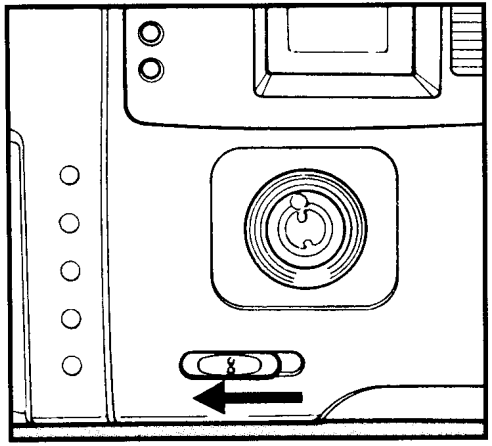


Fig.10 Abb.10 圖.10

www.orphancameras.com

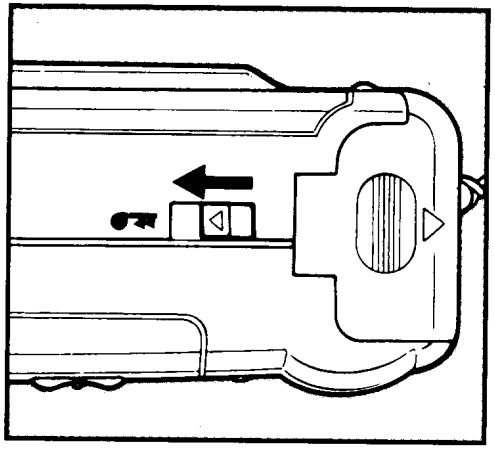


Fig.11 Abb.11 圖.11

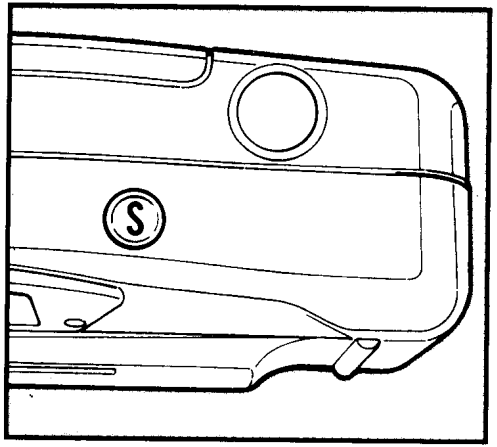


Fig.12 Abb.12 圖.12



Fig.13 Abb.13 圖.13

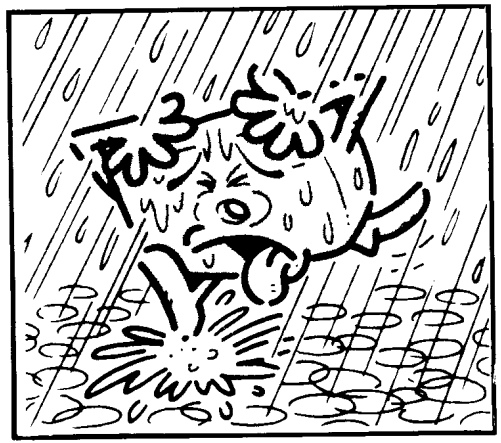


Fig.14 Abb.14 圖.14

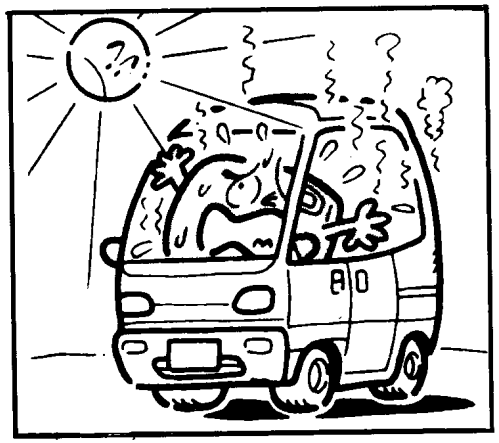


Fig.15 Abb.15 圖.15

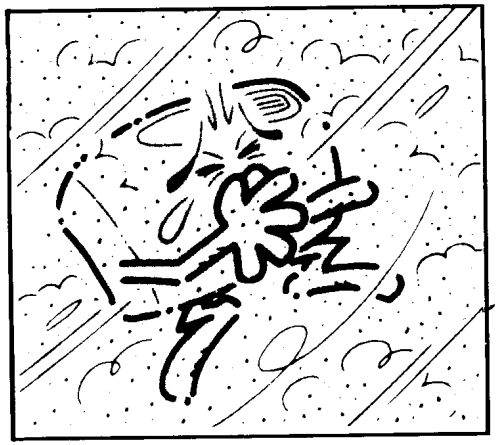


Fig.16 Abb.16 圖.16

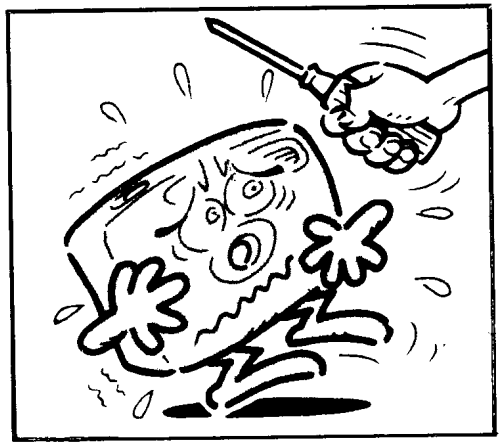


Fig.17 Abb.17 圖.17

www.orphancameras.com

Before using your camera, please be sure to read these instructions carefully.

ENGLISH

Bitte lesen Sie vor der ersten Benutzung der kamera diese Bedienungsanleitung aufmerksam durch.

DEUTSCH

Avant de commencer à vous en servir, veuillez lire attentivement ce mode démploi, afin de vous familiariser avec votre appareil.

FRANÇAIS

Antes de utilizar la cámara, cerciórese de leer estas intrucciones atentamente.

ESPAÑOL

Prima di utilizzare la fotocamera, leggete attentamente questo manuale.

ITALIANO

Antes de usar a sua máquina, leia atentamente estas instruções, por favor.

PORTUGUÊS

在使用相機之前，請務必仔細閱讀下列說明。

CONTENTS

NAME OF PARTS 8
ATTACHING THE STRAP 9
INSERTING THE BATTERY 9
SETTING THE FILM SPEED 10
LOADING THE FILM 10
HOLDING YOUR CAMERA 10
AUTO FLASH PHOTOGRAPHY 11
RED EYE REDUCTION 11
TAKING PICTURES 11
REWINDING THE FILM 12
DATE BACK SYSTEM 13
TAKING CARE OF YOUR CAMERA 15
WARRANTY POLICY 17
SPECIFICATION 19

Before using your camera, please be sure to read these instructions carefully.

www.orphancameras.com

NAME OF PARTS

❶ Film Counter Window
❷ Shutter Release Button
❸ Red-eye Reduction LED
❹ Big Viewfinder Window
❺ Lens Shield/Lens
❻ Power (Lens Cover) Button
❼ Back Cover Lock
❽ Built-in Flash
❾ Film Take-up Spool
❿ Ready Monitor
⓫ Finder Eyepiece
⓬ Film Rewind Shaft
⓭ Film Chamber
⓮ Film Guides
⓯ Film Rewind Button
⓰ Battery Chamber Cover
⓱ Strap Eyelet
⓲ Film Check Window
⓳ Back Cover

ATTACHING THE STRAP (Fig. 1)

1. Insert the loop at the end of the Strap under the Strap Eyelet.
2. Insert the other end of the Strap through the loop and tie the Strap onto Strap Eyelet.

INSERTING THE BATTERY

1. Open the Battery Chamber Cover in the direction of the arrow by puilling it out. **(Fig. 2)**
2. Insert two AA-size bastteries, checking that (+) and (-) on the battery are aligned according to the polarity information inside the Battery Chamber.
3. Close the Battery Chamber Cover by Pushing it until it latches.

Notes:

- Do not use Nickel Cadmium batteries.
- With the battery inserted incorrectly, the camera will not work. Make sure the battery is installed as shown in **Fig. 3.**
- Remove AA batteries from the camera when you do not expect to use it for a long period time.
- Don't try to break up or recharge the battery or throw it into fire.
- Keep the battery out of the reach of chidren.

www.orphancameras.com

SETTING THE FILM SPEED (Fig. 4)

1. This camera is designed to use DX-coded films with ISO ranging from 100 to 400.
2. Your camera automatically sets the correct film speed by reading black-and-silver patterns on the film cassettes.

LOADING THE FILM

1. Push the Back Cover Lock downword to open. **(Fig. 5)**
2. Load the film cassette into the Film Chamber and pull out enough film leader to extend past the Film Leader Mark. **(Fig. 6)**
3. Make sure the film stays within the Film Guides and lies flat.
4. Press the Back Cover shut so that the Back Cover Lock returns to its original position. when "1" appears in the Film Counter Window.

The camera is ready for you to take a picture. **(Fig. 7)**

* Whether there is film in your camera or not can be confirmed by the Film Check Window.

HOLDING YOUR CAMERA (Fig. 8)

* Always use both hands to steady your camera.
* When holding the camera vertically always position it with the flash at the top.
* Be careful not to place your fingers over the lens, flash or focusing window.

AUTO FLASH PHOTOGRAPHY

1. If additional light is required, the Built-in Flash automatically activates.
   * Recommended Flash Shooting Range (ISO 100) 1.2m-about 3.7m (3.9ft-12ft).
2. When the flash is recharged and full, the Ready Monitor lights up. **(Fig. 9)**
   * When the flash is fully charged, the Ready Monitor will be turned off after approx. 45 sec. Then, press ths Shutter Release Button to take a flash photograph. The Ready Monitor lights again to tell you that the flash is ready when pressing the Shutter Release Button halfway.
   * When the flash is used, it will take about 8 seconds to charge the flash fully.

RED EYE REDUCTION

This camera is designed to activate Red-eye Reduction automatically. This makes it possible to minimize the red-eye effect that sometimes occurs when taking portrait photographs with flash. Now it's easy for anyone to take superior shots of people.

TAKING PICTURES

Open the Lens Shied by sliding the Power Button in the direction of arrow. **(Fig. 10)**

* Lens Shield is interlocked with the safety mechanism of the camera. You can fire the camera only when the lens Shield is completely open.

www.orphancameras.com

REWINDING THE FILM


1. After the end of the film has been reached or if you wish to rewind the film before reaching the end of the film, push the Film Rewind Button in the direction of the arrow. The film will automatically rewind. **(Fig. 11)**
2. After the film is fully rewound and "S" is seen in the Film Counter Window. **(Fig. 12)**

* Be careful not to touch the inner lens surface with your fingers or the edge of film.

DATE BACK SYSTEM

[1] Date & Time Imprinting

1 Press the imprint selector button to select the mode desired: DATE, TIME or NO IMPRINT. Push the imprint selector button to change mode in sequence shown below.

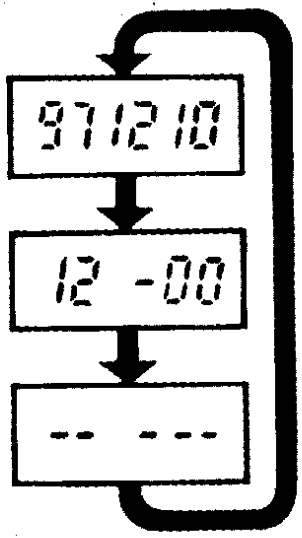


Date imprinting YEAR, MONTH, DAY (Example: 1997 December 10)

Timing imprinting HOUR, MINUTE (Example:12:00

No imrinting

Hyphen between HOUR and MINUTE may not be imprinted

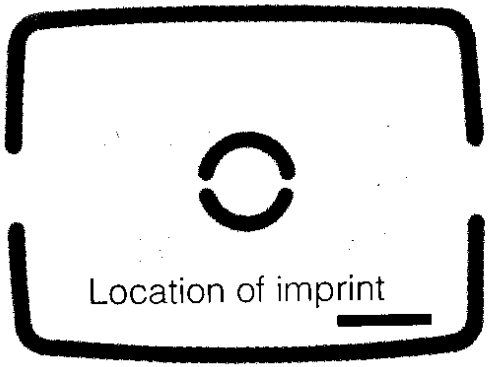


YEAR, MONTH, DATE or HOURS, MINUTES are printed in the location shown above. The imprint will appear orange on color films.
One ligh push advances the digit by one and a deeper push advances it quickly.
Calendar years from 1980 to 2019 are stored in the memory of the camera.

www.orphancameras.com

2 When you set time with display in time mode, prss HOUR and MINUTE buttons to set desired time. One light push advances the digit by one and a deeper push savances it quickly.


NOTE:


* A lithium battery for time and date functions is buit in this camera and no adjustment is necessary once the date and tiem are set, because the built-in clock corrects automatically.
* Date and time will be dimly imprinted if film speed below ASA/ISO 64 is used.
* Legibility of imprints may become washed out against bright or orange back ground.
* Upon pressing the shutter button, "PRINT" is displayed for about 1 second indicating the imprinting is completed.

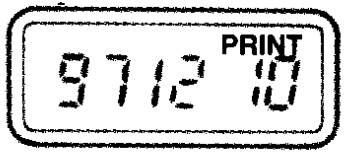

[2] Replacement of Lithium Battery 3V CR2025

1 Remove the cover of the battery chamber only while the back is open and no film is inserted. Loosen the set screw with a screw-driver, and remove the battery cover.

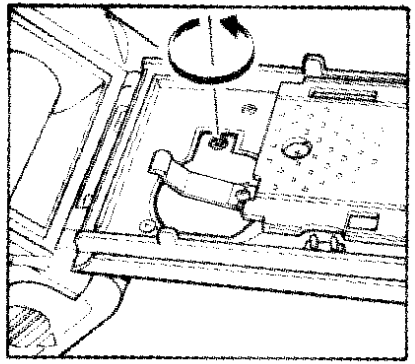

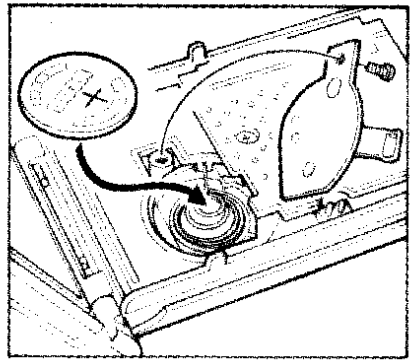

2Replace the lithium battery.

Take out the used battery and replace it with a new battery (CR2025) with (+) side up.

* Old battery must be disposed of in a responsible manner.

3 Replace the cover of the battery chamber.

Align the screw holes correctly and secure the battery cover with the set screw. Correct digits on the display if necessary because the display or digits. shown may vary or be omitted after the replacement of the lithium battery.

NOTE:

DO NOT replace the battery when film is located in your camera.

TAKING CARE OF YOUR CAMERA

Your camera is precision instrument and a sophisticated machine designed and manufactured to give you reliable and longlasting service. If you care for and handle this camera properly, you are going to be satisfied by its excellent and elegant design.

The following careless handling may cause major damages:

1. Dropping and/or banging the camera, which may damage it many ways. **(Fig. 13)**
2. Dropping into water or water damage. Your camera is not water-proof, particularly when it is submerged in salt water. It must be protected from salty breezes or sprays at the beach, any kind of splashing and rain. If your camera gets wet, please wipe it dry immediately and have it examined at an assigned service center. **(Fig. 14)**

www.orphancameras.com

3. Temperature and humidity. You have to avoid subjecting the camera to extreme high or low temperature and humidity, since the battery will not function properly in extreme temperature conditions. Extreme temperatures and humidity may cause serious damage of rusting to your camera. **(Fig. 15)**
4. Vibration from traveling in a car, ship or airplane could cause loosening screws or damage the camera itself. Padding the bottom of your camera with foam-rubber could minimize this problem.
5. The shutter mechanism and moving parts of this camera could be damaged by dirt as well as sand, so your camera has to cleaned periodically to keep it operation properly. **(Fig. 16)**
6. Make sure the tripod screw fits your camera when mounting it on a tripod. Please be reminded that a longer tripod screw might puncture and damage the camera.
7. Please never try to disassemble the camera, since the circuit of this camera has a high working voltage. **(Fig. 17)**

SPECIFICATIONS

Type:	35mm motorized camera with auto fash.
Film:	35mm perforated cartridge film, 24mm x 36mm format.
Lens:	30mm F6.3 lens, 3 elements in 3 groups.
Focusing:	Free focus.
Focusing Range:	1.5 m to infinity
Shutter:	Shutter speed 1/125 sec.
Aperture Setting:	F6.3
Film Speed Index:	ISO 100/200 and 400.
Viewfinder:	Manification: 0.68X
	Field angle: 88%

www.orphancameras.com

Flash:	Built-in type, Recycling time: approx. 8 sec. AUTO FLASH.
Film Winding and Rewinding:	Automatic winding and power rewind.
Red-eye Reduction:	LED lamp light up before the shutter is released.
Counter:	Additive, automatic reset to "S" When the camera back door is opened.
Power Source:	2 AA alkaline or manganese batteries. (Ni-Cd batteries cannot be used.)
Dimensions:	118 (L) x 73.5 (H) x 46.5 (W) mm
Weight:	175g

* Design and specification are subject change without notice.