

INSTRUCTION FOR USING

**Tele-
Unit
Koniflex**

KONISHIROKU PHOTO IND. CO., LTD.

Instructions for use of Koniflex TELEPHOTO LENS

For the first time, a twin-lens reflex camera can achieve the versatility of miniature cameras. The unique design of the Koniflex Telephoto Lens combines and interchangeable taking lens in conjunction with a Telephoto Viewfinder Attachment Lens.

Specifications:

Finder Lens Attachment:
135mm View Tele-Hexar f3.5
Interchangeable Taking Lens:
135mm Tele-Hexanon f4.5

Focusing from 6 feet to Infinity.

Directions:

1. How to attach the lenses:

- A. Remove the present taking lens (85mm Hexanon) by unscrewing it from its mount, turning the lens-mount in a counter-clockwise direction.
- B. Remove the rear lens cap from your Tele-Hexanon lens, screw the mount in, turning in a clockwise direction.
- C. Take the rear lens cap off your View Tele-Hexar, screw it into the viewing lens which is threaded to accept it. Turn in a clockwise direction.

Be sure to cap and store the standard lens that has been removed in the lens case.

2. Using the Tele-Koniflex

A. Focusing:

Focus your Tele-Koniflex as you would your Koniflex camera, using your ground glass to view your image and your focusing knob to bring the image into focus.

At this time, distance scale and depth of field

This manual is for reference and historical purposes, all rights reserved.

~~XXXXXXXXXXXXXXXXXXXX~~
This creation is copyright © by M. Butkus, NJ, U.S.A.

These creations may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company

On-line camera manual library

If you find this manual useful, how about a donation of \$2 to:
M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701
and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or
\$18.00 for a hard to read Xerox copy.

This will allow me to continue this site, buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

If you use Pay Pal, go to my web site

www.orphancameras.com and choose the secure PayPal donation icon.

scale should not be used.

B. Adjusting the Diaphragm:

The Tele-Hexanon has a clearly visible diaphragm scale of its own. The diaphragm in the camera body must be set at f3.5 and should not be used.

C. Other camera operations of the Tele-Hexanon are identical to those used with the standard Koniflex. A separate infinity stop is provided for use with the Tele-Hexanon.

Important :


- A. The Tele-Hexanon lenses are precisely matched to the camera, and are not interchangeable with other Koniflex cameras.
- B. Before affixing your Tele-Hexanon lens, be sure the diaphragm of the standard lens is set at f3.5.
- C. Be sure that your Tele-Hexanon lenses are carefully screwed completely into the mount.
- D. Whenever possible use a tripod with your Tele-Koniflex camera.

The Tele-Hexanon lens is actually a group of elements attached to the stationary rear elements of the taking lens. The standard taking lens that remains in the camera is equivalent to 85mm of the 135mm focal length of the Tele-Hexanon.

Accessories :

- A. Tele-Konifilters (UV, Y_1 and R_1) made of solid optical glass, screw directly into Tele-Hexanon lens,
- B. Tele-Konihood made especially for the Tele-Koniflex camera. Fasten Tele-Konihood to Tele-Hexanon lens. The notch must be on top.

- ① Finder lens attachment: View
Tele-Hexar f 3.5/135mm
- ② Interchangeable taking lens:
Tele-Hexanon f 4.5/135mm
- ③ Diaphragm adjusting ring.
- ④ Standard taking lens: Hexanon
f 3.5/85mm

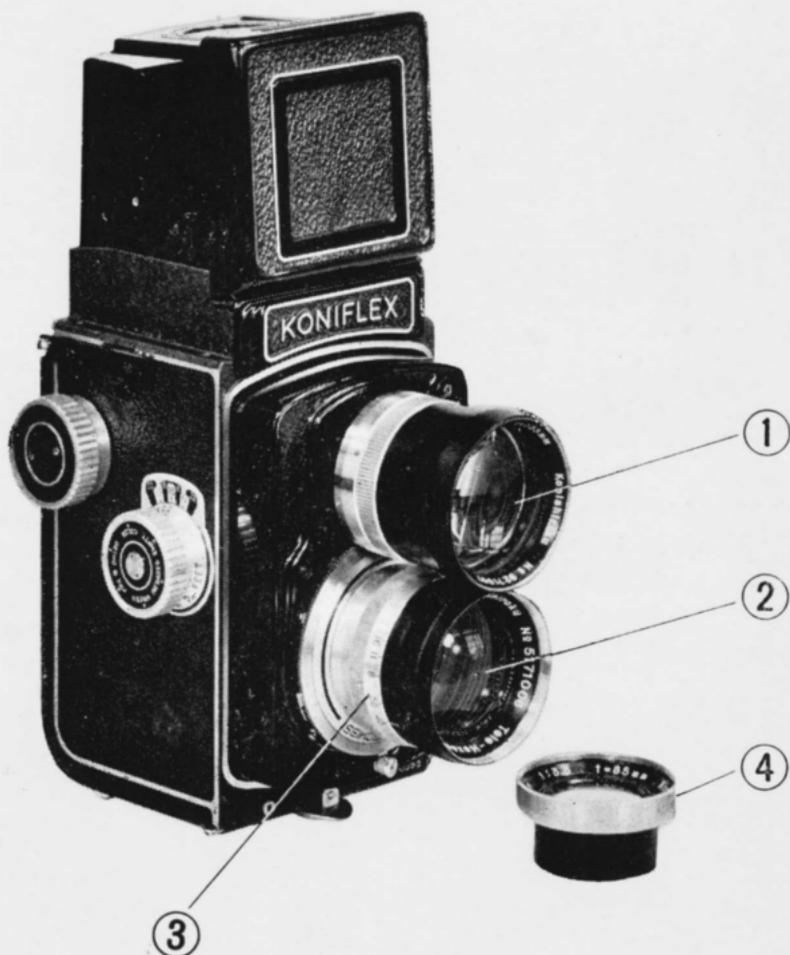



Hexanon 85mm

Tele-Hexanon 135 mm

Focused at 7.5 feet.



