



This manual is for reference and historical purposes, all rights reserved.

This creation is copyright© by M. Butkus, NJ, U.S.A.

These creations may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

If you find this manual useful, how about a donation of \$2 to:

M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701

and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or

\$18.00 for a hard to read Xerox copy.

This will allow me to continue this site, buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

If you use Pay Pal, go to my web site

www.orphancameras.com and choose the secure PayPal donation icon.

WESTON[®]

XMM-2


INSTRUCTIONS
FOR THE
WESTON

MODEL 550

XM-2 CdS
EXPOSURE METER

METER DESCRIPTION

- | | |
|-----------------------------------|--|
| 1. Battery Cover | 10. Baffle Slide Switch |
| 2. Scale Selector Switch | 11. Outer Dial |
| 3. Pointer | 12. Index Mark |
| 4. Zero Corrector | 13. Shutter Speed Scale |
| 5. Film Speed Index | 14. f/Stop Scale |
| 6. Dial | 15. Incident Light Diffusor |
| 7. Dial Knob | 16. Movie Film Speed Scale |
| 8. Film Speed Index Window | 17. Exposure Value (E.V.) Scale |
| 9. Scale Selector Window | |

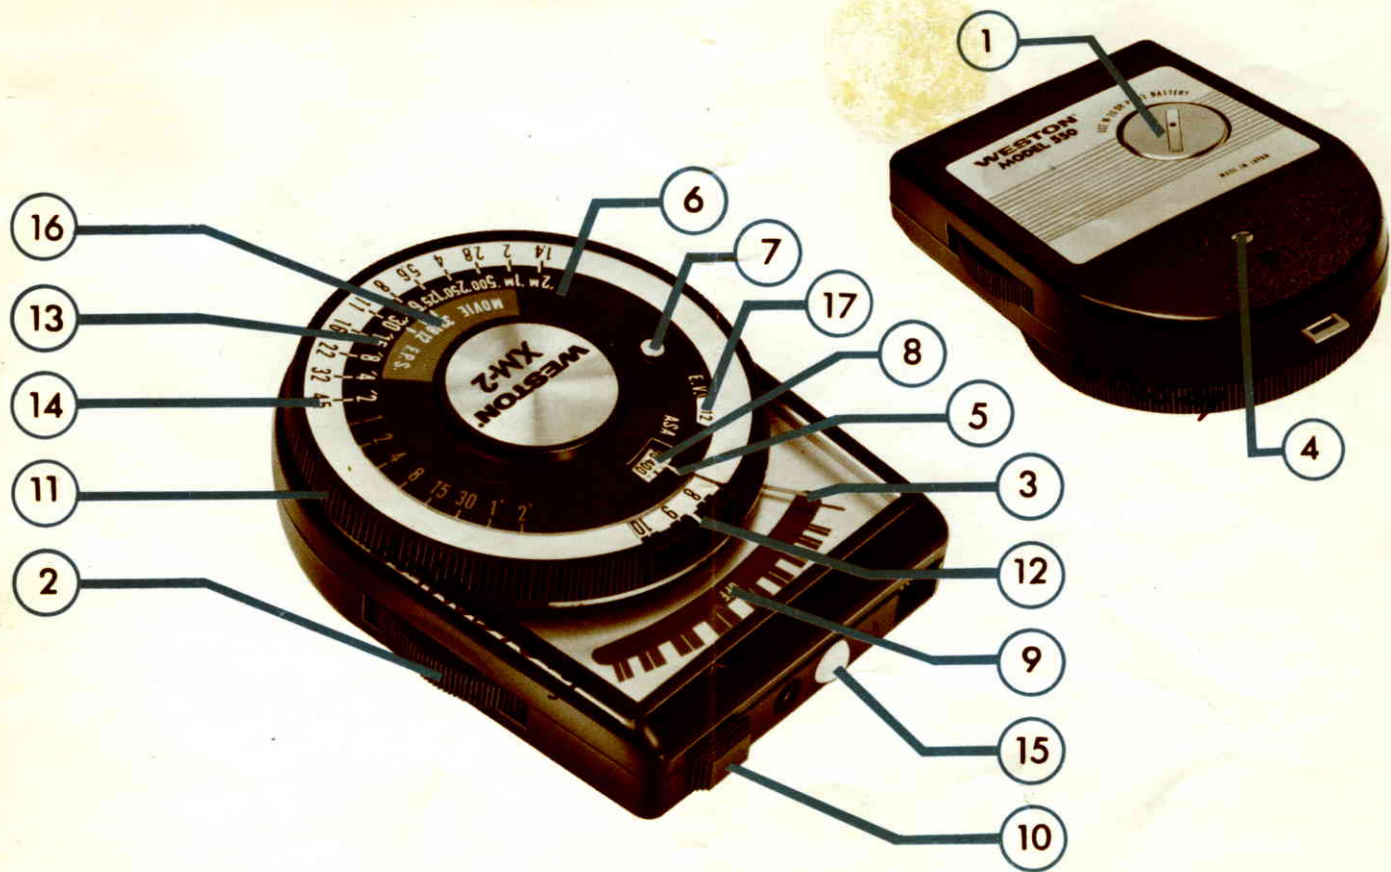

XM-2

OPERATING INSTRUCTIONS

Free from budk6.07

- 1. Install Battery - Remove battery cover (1) with coin or screwdriver and insert battery with positive "+" side up and replace cover. It is advisable to remove battery for long storage periods.**
- 2. Check Pointer Alignment - With Scale Selector Switch (2) in "OFF" position, pointer (3) should be on zero. If pointer is off zero, insert screwdriver into zero corrector (4) and turn it clockwise, or counter-clockwise until pointer is on zero.**
- 3. Set Film Speed - Set film speed index (5) by rotating dial (6) with dial knob (7) until the index number (ASA) supplied with the film is visible in window (8) and aligned with the index mark.**
- 4. Select Scale - The Scale Selector Switch (2) has four positions as shown in window (9): OFF, BATTERY TEST, H (normal light), and L (low level light).**
 - a. Battery Check - To test the battery condition, switch to BATTERY TEST position and note pointer. Pointer should be on, or to the right of mark on the BATTERY TEST scale. If the pointer is to the left of the mark, replace the battery immediately.**

NOTE: Place the Scale Selector Switch (2) in the "OFF" position when meter is not in use.
- 5. Reflected Light Measurements - To measure reflected light, set baffle slide switch (10) to "REF" position and point the meter at subject. Set Scale Selector Switch (2) to "H" scale for normal light conditions. Note number on "H" scale, under pointer (3), and rotate outer dial (11) until index mark**

XM-2

OPERATING INSTRUCTIONS

- (12) appears at the same number as the pointer reading. Select a shutter speed and f/Stop combination from the Shutter Speed Scale (13) and f/Stop scale (14), respectively.
6. **Incident Light Measurements** - Incident light readings are extremely useful for portraits, copy work and landscapes. To measure incident light, set baffle slide switch (10) to "INC" position, in order to place the diffusor (15) in front of the photocell. From the subject to be photographed, point the meter directly at the camera and note the reading on the scale (9) under the pointer (3). Rotate the outer dial (11) until index mark (12) appears at the same number as the pointer reading. Select a shutter speed and f/stop combination from the Shutter Speed Scale (13) and f/stop scale (14).
 7. **Movie Film Exposures** - When using the Weston XM-2 to determine proper exposure for movie film, proceed as follows:
 - a. **Determine Shutter Speed** - The correct shutter speed for your movie camera appears on scale (12), directly opposite MOVIE F.P.S. scale (16); generally 18 frames-per-second. Film speeds of 12 F.P.S. and 32 F.P.S. are also provided.
 - b. Perform a "reflected light" or "incident light" measurement, as described above, and note the f/Stop reading on scale (14), directly opposite the shutter speed determined in step a.
 8. For cameras with E.V. (Exposure Value) settings, use scale (17).
 9. For low level lighting conditions as usually encountered indoors, set Scale Selector Switch (2) to the "L" scale position.